



RX60 - RX72 - RX84

Rotary Mower

Rev 05-11

Part No. 00785503P

PART'S MANUAL



¡ATENCIÓN!

LEA EL INSTRUCTIVO

Si No Lee Ingles, Pida Ayuda a Alguien
Que Si Lo Lea Para Que le Traduzca las
Medidas de Seguridad.



An Operator's Manual was shipped with the equipment in the Manual Canister. This Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the unit at all times. **READ, UNDERSTAND, and FOLLOW** the Safety and Operation Instructions contained in this manual before operating the equipment. If the Operator's Manual is not with the equipment, contact your dealer or Alamo Industrial (800-356-6286) to obtain a Free copy before operating the equipment.

ALAMO INDUSTRIAL

1502 E. Walnut
Seguin, Texas 78155
210-372-3551



TO THE OWNER/OPERATOR/DEALER

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

BEFORE YOU START!! Read the safety messages on the implement and shown in your manual.
Observe the rules of safety and common sense!



DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTION CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

1.



2. NO RIDERS. NO CHILDREN OPERATORS.



3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, ROPS & OPS.



4. BLOCK UP SECURELY BEFORE WORKING UNDER.



1. Study and understand Operator's Manuals, Safety Decals, and Instructional Decals for tractor and implement to prevent misuse, abuse, and accidents. Practice before operating in a confined area or near passersby.
 - Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children.
2. Allow no children on or near folding mower or tractor. Allow no riders on tractor or implement. Falling off may cause serious injury or death from being run over by tractor or mower or contact with rotating blades.
3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seat belt securely fastened to prevent injury and possible death from falling off or tractor overturn.
 - Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, & Ear Plugs are recommended.
4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain area is clear before lowering or folding.
5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding mowers. Put Booms securely in Transport Rest.
 - Folding and Boom Mowers have raised center of gravity. Slow down when turning and on hillsides.
6. Make certain that SMV sign, warning lights, and reflectors are clearly visible. Follow local traffic codes.
7. Never operate with Cutting Head or Folding Section raised if passersby, bystanders, or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Guards or mower structure.
8. Before dismounting, secure implement in transport position or lower to ground.
 - Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent crushing by entanglement in rotating parts which could cause injury or death.
 - Never mount or dismount a moving vehicle. Crushing from runover may cause serious injury or death.

5. TRANSPORT SAFELY, LOCK UP.



6. USE SMV, LIGHTS, & REFLECTORS.



7. DO NOT OPERATE WITH CUTTER OR WING RAISED



8. DO NOT MOUNT OR DISMOUNT WHILE MOVING.



02967827

WARRANTY INFORMATION:

Read and understand the complete Warranty Statement found in this Manual. Fill out the Warranty Registration Form in full and return it within 30 Days. Make certain the Serial Number of the Machine is recorded on the Warranty Card and on the Warranty Form that you retain. The use of "will-fit" parts will void your warranty and can cause catastrophic failure with possible injury or death.

BOLT TORQUE

Mounting procedures for mowers will require a significant amount of bolt nut and washer installation.

Frame and structure mounting bolts should be installed using *Red Loctite*, and torqued to the dry values listed in the torque chart based on the bolt size and hardness.

Other structures such as pump mounting bolts should be installed with *Blue Loctite* and torqued to the dry values indicated in the chart.

Bolt tightness should be completed with and checked with a suitable torque wrench.

Torque checks should be completed throughout the life of the mower in accordance with the maintenance chart provided in this manual.



 
 
 
 
Loose bolts on a frame or in a casting may be a result of:

- Vibration from the mower due to imbalance of the mower blades
- Pulled threads due to over tightening
- Distortion of the hole due to under tightening during installation

Bolts broken or sheared in the mounting structure or tractor may be the result of:

- Improper alignment of the Mounting Plate or Structure such that it is not sitting flat on the mating surface
- Distortion of the bolt due to over-tightening
- Under tightening of the bolts

Check the bolt torque during installation and prior to delivery with a suitable torque wrench.

Proper Torque Values for Standard Bolts			Proper Torque Values for Metric Bolts				
Bolt Diameter			Bolt Diameter				
	Head Marking Three Lines Grade Five	Head Marking Six Lines Grade Eight		Head Marking 4.6	Head Marking 8.8 or 9.8	Head Marking 10.9	Head Marking 12.9
	Pound - Foot Value Dry	Pound - Foot Value Dry		Pound - Foot Value Dry	Pound - Foot Value Dry	Pound - Foot Value Dry	Pound - Foot Value Dry
1/4"	7	10	6mm	3	7	9	10
5/16"	15	22	8mm	6.2	16	23	24
3/8"	26	39	10mm	12	32	45	47
7/16"	42	60	12mm	21	55	79	81
1/2"	64	88	14mm	34	88	126	130
9/16"	100	134	16mm	53	137	196	202
5/8"	128	180	18mm	73	189	270	279
3/4"	227	320	20mm	104	267	382	394
7/8"	365	515	22mm	141	364	520	537
1"	547	772	24mm	179	461	660	680
			27mm	262	676	968	998
			30mm	355	917	1312	1353

To get Newton-Meters multiply pound-foot of torque by 1.356

PARTS SECTION

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this section.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.
2. The Purchase Order must include the name and address of the person or organization ordering the parts, who should be charged, and if possible, the serial number of the machine for which the parts are ordered.
3. The Purchase Order must clearly list the quantity of each part, the complete and correct part number (be sure to include all periods), and the basic name of the part.
4. The Manufacturer reserves the right to substitute parts where applicable.
5. Some parts are unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a Purchase Order.
6. The Manufacturer reserves the right to change prices without prior notice..



For maximum safety and to guarantee optimum product reliability, always use genuine Alamo Industrial Parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death. Direct any questions regarding parts to:



ALAMO INDUSTRIAL


1502 E. Walnut
Seguin, Texas 78155
830-379-1480



PART NAME INDEX


A-FRAME QUICK HITCH ASSEMBLY - RX60, RX72.....	4
A-FRAME QUICK HITCH ASSEMBLY - RX84.....	5
A-FRAME QUICK HITCH ATTACHMENT - RX60, RX72.....	6
A-FRAME QUICK HITCH ATTACHMENT - RX84.....	7
AXLE ASSEMBLY PULL TYPE - RX84.....	8
BLADE PAN ASSEMBLY - RX60.....	10
BLADE PAN ASSEMBLY - RX72.....	11
BLADE PAN ASSEMBLY - RX84.....	12
CASTER WHEEL AND HUB ASSEMBLY.....	13
CHAINGUARD ASSEMBLY - DOUBLE FRONT RX84.....	14
CHAINGUARD ASSEMBLY - DOUBLE REAR RX84.....	15
CHAINGUARD ASSEMBLY - FRONT.....	16
CHAINGUARD ASSEMBLY - REAR.....	17
DEFLECTOR ASSEMBLY - FRONT.....	18
DEFLECTOR ASSEMBLY - REAR.....	19
DRIVELINE ASSEMBLY CV.....	20
DRIVELINE ASSEMBLY LIFT - RX60, RX72, RX84.....	21
DRIVELINE ASSEMBLY LIFT CAT-5 - RX84.....	22
DRIVELINE JACKSHAFT ASSEMBLY - RX84.....	23
GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11616 - BELOW.....	24
GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11617 - CURRENT.....	26
GEARBOX ASSEMBLY - RX84 - SERIAL 10022 - BELOW.....	28
GEARBOX ASSEMBLY - RX84 - SERIAL 10023 - CURRENT.....	30
GEARBOX ATTACHMENT RX60, RX72 SERIAL 11616-BELOW, & RX84.....	32
GEARBOX ATTACHMENT RX72 SERIAL# 11617-CURRENT.....	33
HYDRAULIC CYLINDER.....	34
SKID SHOE ASSEMBLY.....	35
SLIP CLUTCH ASSEMBLY - RX60, RX72, RX84.....	36
SLIP CLUTCH ASSEMBLY CAT-5 - RX84.....	37
TAILWHEEL ASSEMBLY - DUAL RX84.....	38
TAILWHEEL ASSEMBLY - RX60, RX72.....	39
TAILWHEEL ASSEMBLY - RX84.....	40
TAILWHEEL HUB ASSEMBLY.....	41
TONGUE ASSEMBLY - RX84.....	42

 A-FRAME QUICK HITCH ASSEMBLY - RX60, RX72

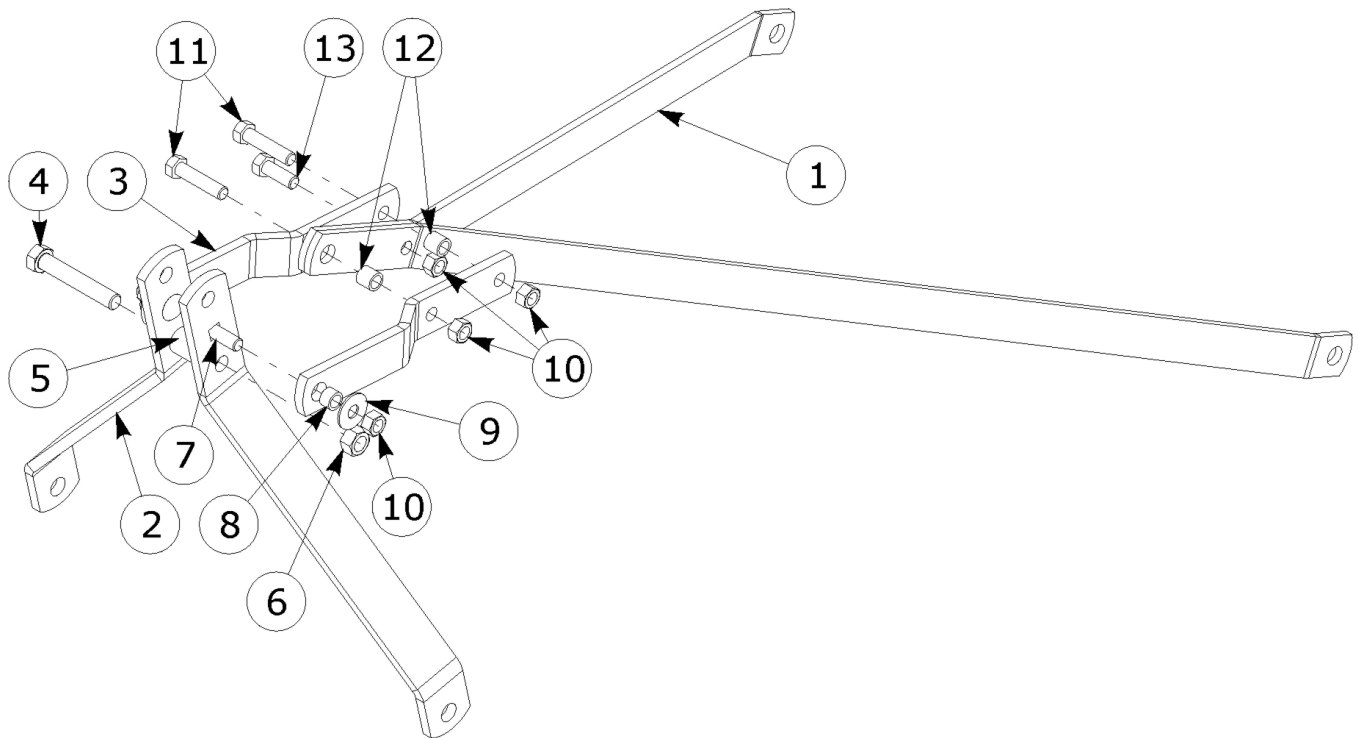


ITEM	PART NO.	QTY.	DESCRIPTION
1	00780585	-	FLAT,REAR BRACE - RX72
	00781038	-	FLAT,REAR BRACE - RX60
2	00780582	-	FLAT, A-FRAME - RX72
	00780563	-	FLAT, A-FRAME, QUICK HITCH - RX60
3	00780549	-	BAR, BRACE - RX72
	00780603	-	BAR, BRACE - RX60
4	00009500	-	BOLT-HEX 3/4 NC 4-1/2 PL5
5	0758550030	-	SPACER
6	00037200	-	NUT TOPLOCK 3/4 NC PLC
7	2101120	-	CARB 5/8 NC X 2-1/2 PL5 - RX72
	4905	-	CARB 5/8-11 NC 2 PL5 - RX60
8	0732020020	-	BUSHING - RX72
	523012	-	BUSHING, ORDER 780 MIN HT - RX60
9	00756077	-	WASHER,5/8 HARDENED
10	00695100	-	NUT,TOPLOCK 5/8 NC PLB
11	02845600	-	HEXB 5/8 NC 3 PL5 - RX72
	00703200	-	HHCS 5/8 NC 2 3/4 PL5 - RX60
12	00780592	-	BUSHING, A-FRAME TOGGLE
13	02845500	-	HEXB 5/8 NC 2 PL5

 A-FRAME QUICK HITCH ASSEMBLY - RX84

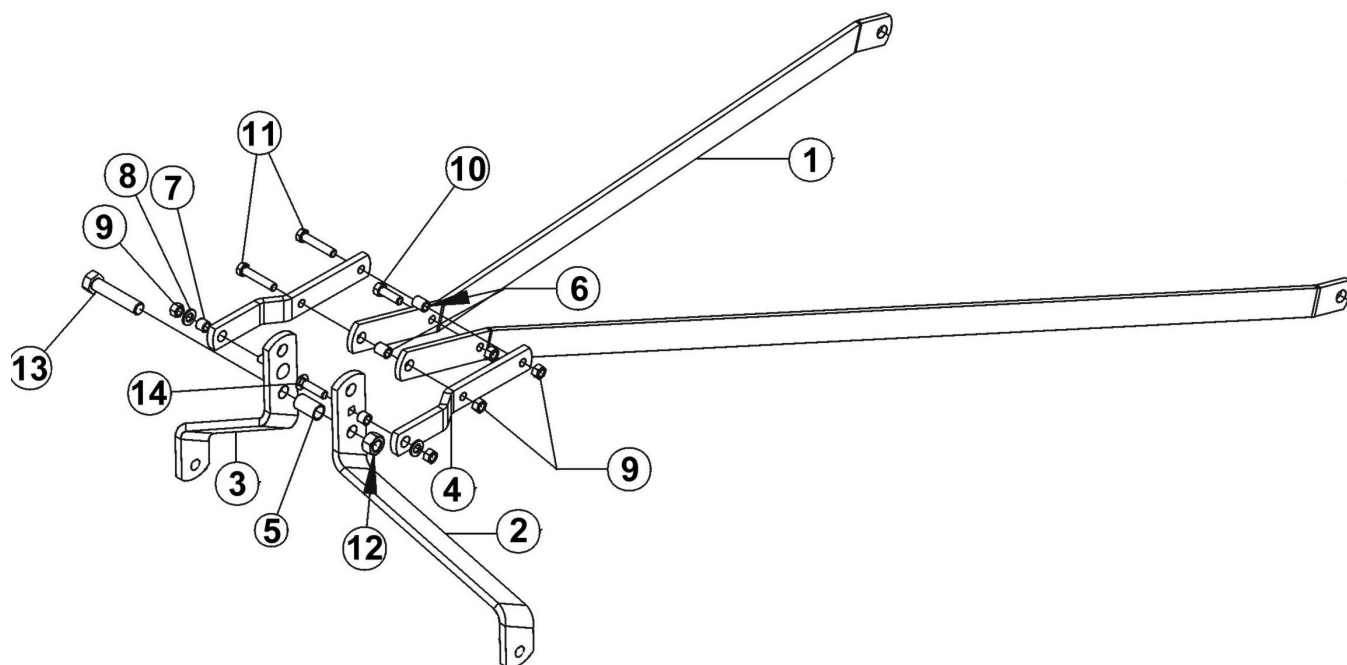


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781069	2	FLAT, REAR BRACE
2	00781411	1	FLAT, A-FRAME LH
3	00781410	1	FLAT, A-FRAME RH
4	00781117	2	FLAT, QUICK HITCH TOGGLE
5	0758550031	1	BUSHING
6	00761199	2	SPACER TUBE
7	0732020020	4	BUSHING
8	00756077	10	5/8 HARDENED WASHER
9	00695100	13	NUT, 5/8 NC TOPLOCKNUT
10	02845500	1	BOLT, 5/8 X 2
11	00600700	2	HEXB 5/8 NC 3-1/4 PL5
12	02030300	1	NUT, 1" TOPLOCK
13	00750479	1	HEXB 1NC 4-3/4 PL5
14	2101120	2	CARB 5/8 X 2-1/2

 A-FRAME QUICK HITCH ATTACHMENT - RX60, RX72

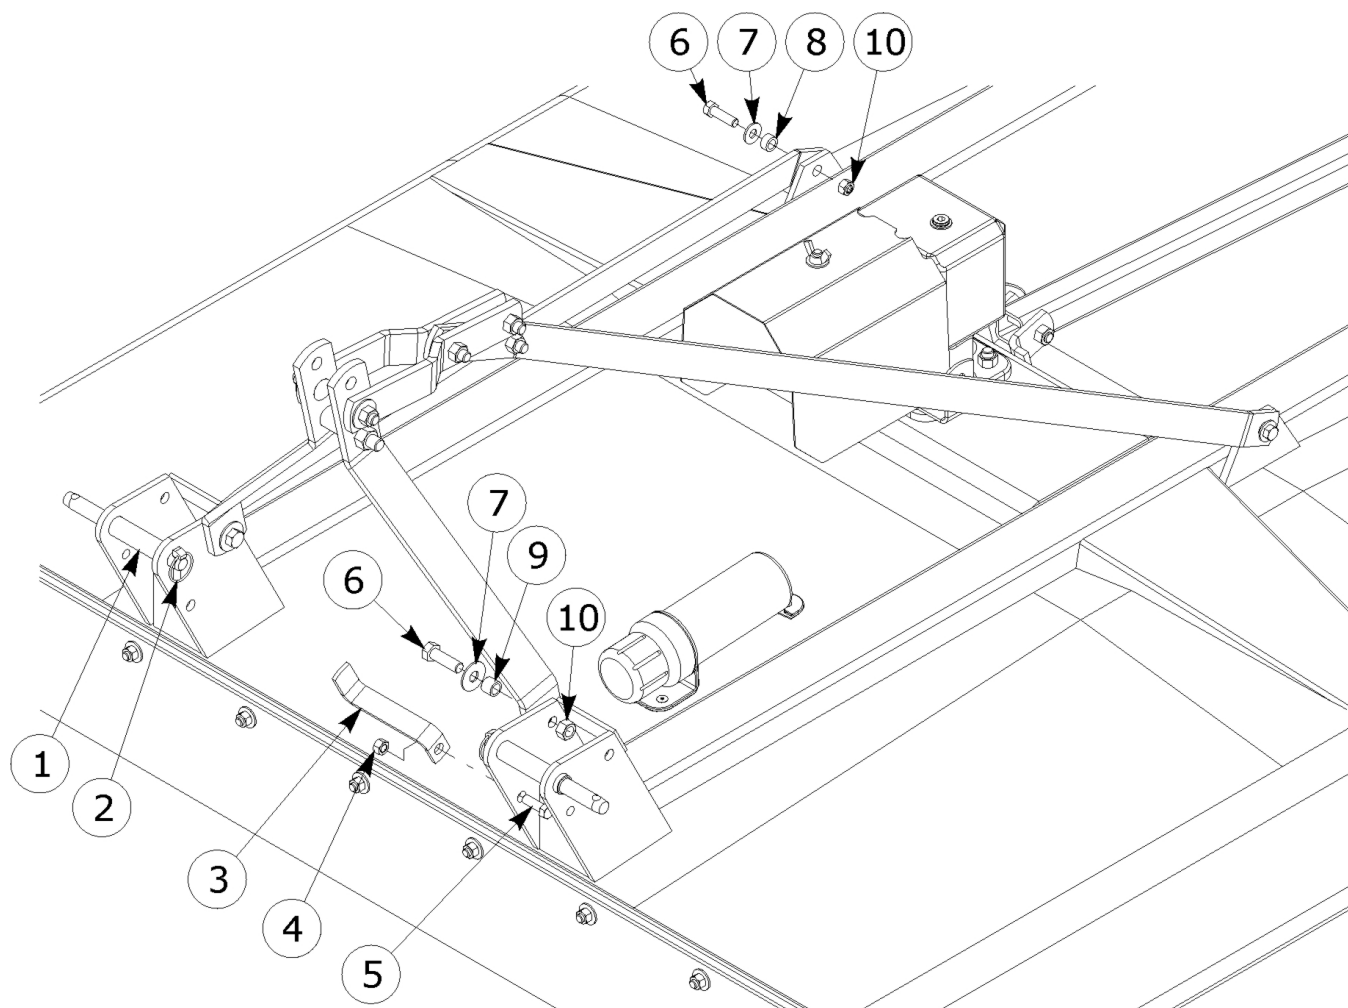


ITEM	PART NO.	QTY.	DESCRIPTION
1	00775243	2	PIN WRIST CAT 1&2
2	2196	2	CLIP (LYNCH PIN), 13/32 DIA.
3	00780663	1	FLAT, DRIVELINE STORAGE
4	00001800	1	LOCKNUT TLM 1/2 NC PLB
5	00748823	1	HHCS 1/2-13UNC 1-1/2 PL5
6	02845500	4	HEXB 5/8 NC 2 PL5 - RX72
	00695100	4	LOCKNUT TOPLOCK 5/8NC PLB - RX60
7	00756077	4	WASHER, 5/8 HARDENED
8	00761724	2	BUSHING HITCH
9	0732020020	2	BUSHING - RX72
	523012	2	BUSHING, ORDER 780 MIN HT - RX60
10	00695100	2	NUT, TOPLOCK 5/8 NC PLB
11	00785238	2	BUSHING, CAT. II QUICK HITCH

 A-FRAME QUICK HITCH ATTACHMENT - RX84

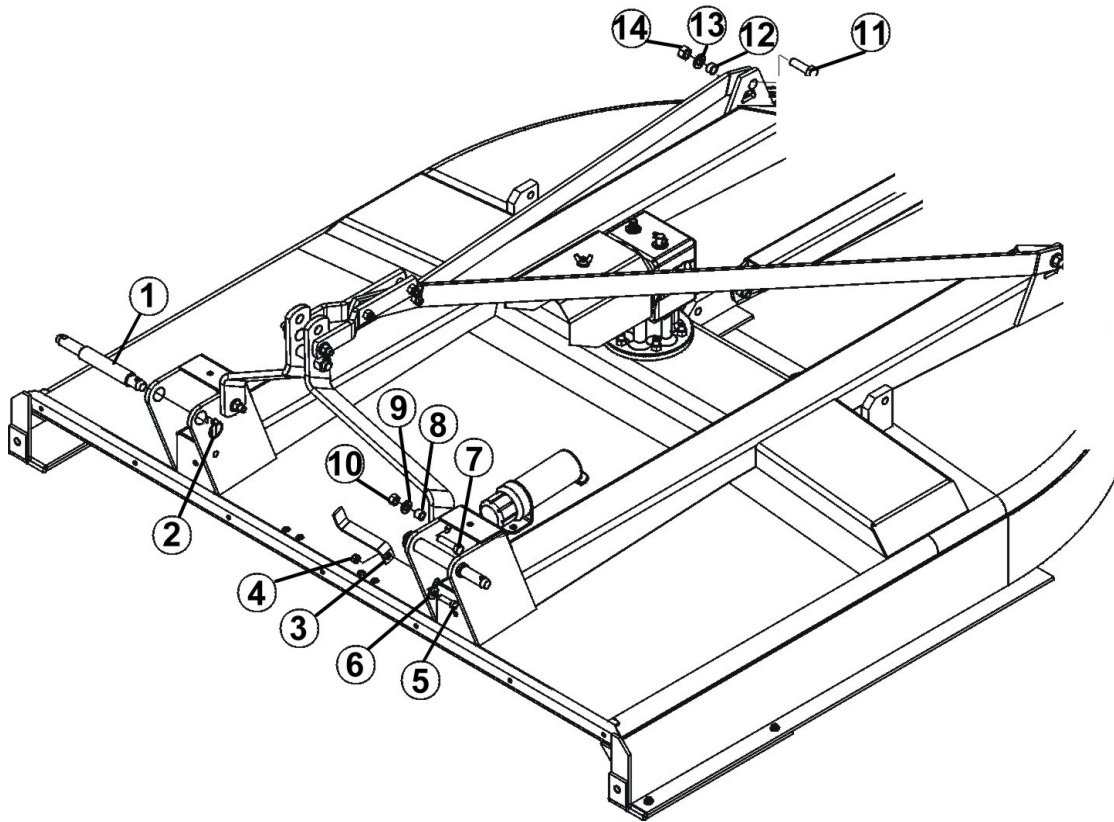

ITEM	PART NO.	QTY.	DESCRIPTION
1	69141	2	PIN, HITCH CAT II & III
2	2196	2	CLIP (LYNCH PIN), 13/32 DIA.
3	00780663	1	FLAT, DRIVELINE STORAGE
4	00001800	1	LOCKNUT TLM 1/2 NC PLB
5	00749130	1	HHCS 1/2-13UNC 1-3/4 PL5
6	00002700	2	FLATWASHER 1/2 PL STD
7	00750952	2	HEXB,5/8NC X 2-1/2,ZP,GRD5
8	0732020020	2	BUSHING
9	00756077	2	WASHER,5/8 HARDENED
10	00695100	2	LOCKNUT TOPLOCK 5/8NC PLB
11	00037100	2	HEXB 3/4 NC 2-1/2 PL5
12	511016	2	BUSHING YDP
13	5312316	2	WASHER, 3/4
14	00037200	2	NUT 3/4-NC TOPLOCK GRC PL

 
AXLE ASSEMBLY PULL TYPE - RX84

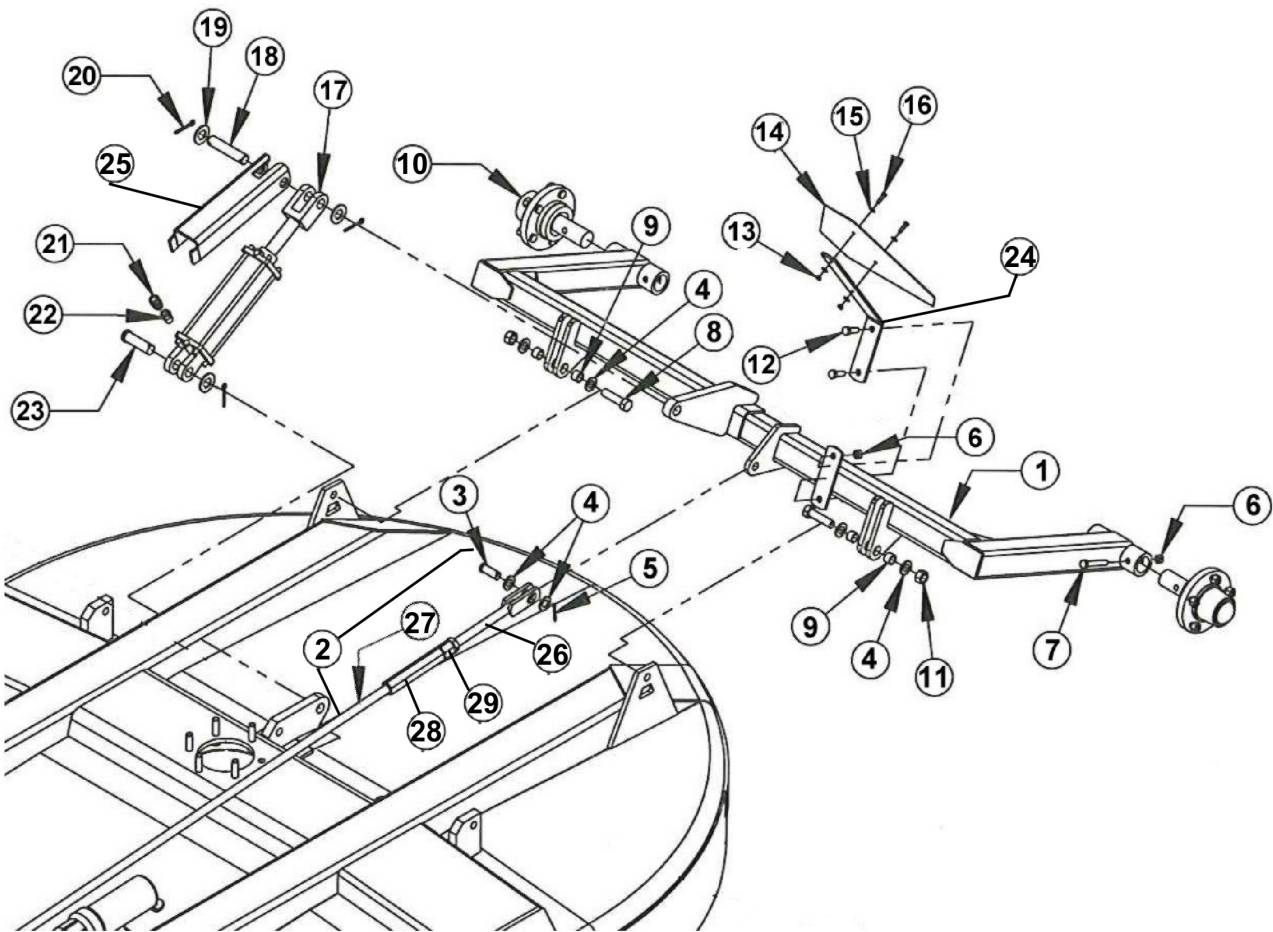

AXLE ASSEMBLY PULL TYPE - RX84**Continued...**


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781149	1	WDMT, AXLE - 284
2	00781178	1	ASY, LEVEL ROD - 284
3	651102	2	PIN, DRILLED
4	00002701	2	FLATWASHER, 3/4, TYPE AW, ZP
5	00755153	2	PIN, COTTER 3/16 X 1-1/2 PLATED
6	00001800	2	LOCKNUT TLM 1/2 NC PLB
7	00764375	2	HHCS 1/2NC X 3-1/4 PL5
8	00007800	2	HEXB 3/4 NC 3 PL5
9	511016	4	BUSHING
10	00775616A	2	ASY,HUB & SPINDLE
11	00037200	2	NUT 3/4-NC TOPLOCK GRC PL
12	00748823	2	HHCS, 1/2 - 13NC X 1-1/2 PL5
13	02959924	2	NUT, 1/4" NC
14	03200347	1	EMBLEM, SMV
15	00024100	4	1/4" FLATWASHER
16	10058000	2	HHCS 1/4 NC 1 PL5
17	8727A	1	HYDRAULIC CYLINDER
18	103266	1	CYLINDER PIN
19	02822500	2	FLATWASHER 1 PL STD
20	00606000	4	PIN, COTTER 3/16 X 2
21	7329	1	ADAPTER, HYD, STGHT
22	0652141311	1	STRAIGHT ADAPTER 8MP-8MJ
23	8354	1	PIN, HYD. CYLINDER
24	00785646	1	SMV BRACKET
25	00777963	1	TRANSPORT LOCK PLATE
26	00758643	1	ROD, CONTROL
27	00781177	1	WELDMENT LONG LEVEL ROD
28	00778159	1	NUT, 9" ADJUSTING
29	5C1490	1	HEXNUT, 7/8 JAM ZP

 BLADE PAN ASSEMBLY - RX60

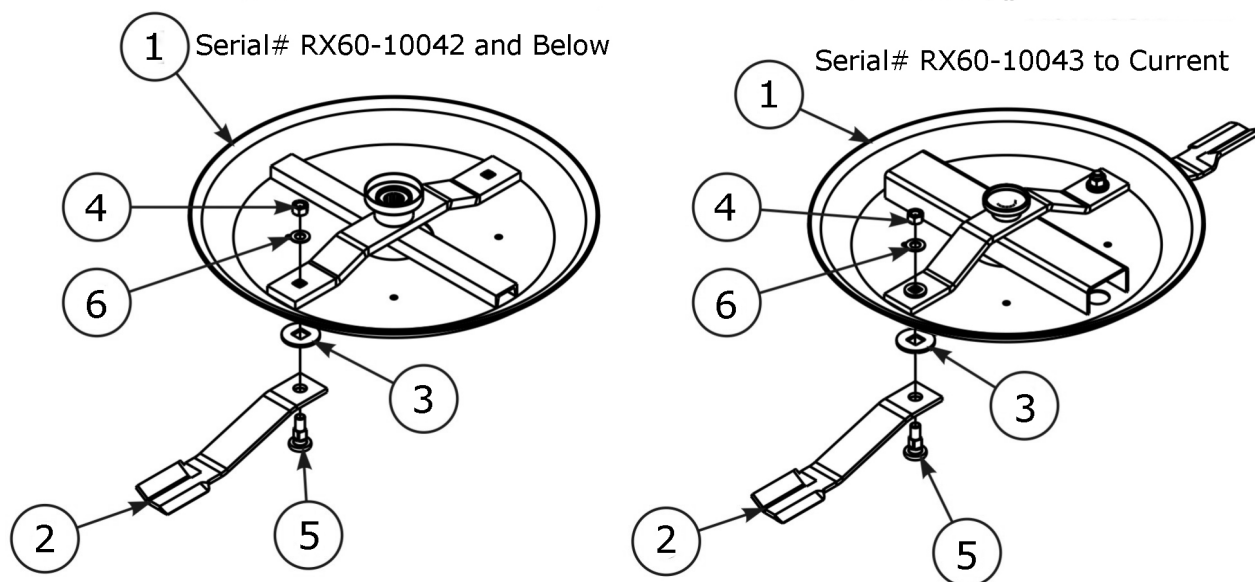


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781388	1	WDMT,BLADE PAN (SERIAL# RX60-10042 AND BELOW)
	00786797	1	WDMT,BLADE PAN (SERIAL# RX60-10043 TO CURRENT)
2	00780882	2	BLADE, CCW FAN 22-1/2 CTR-TIP 260
	0652010030	2	BLADE, FLAT
	00757830	2	BLADE, HIGH SUCTION TWISTED
3	00780945	2	WASHER 1-5/64 SQ HOLE X 3 OD 260
4	5GL16140	2	LOCKNUT 1 -14 LH TLN PL - 260
5	571044	2	BOLT SHOULDER - 260
6	571045	2	WASHER - HARDENED - 260

 BLADE PAN ASSEMBLY - RX72

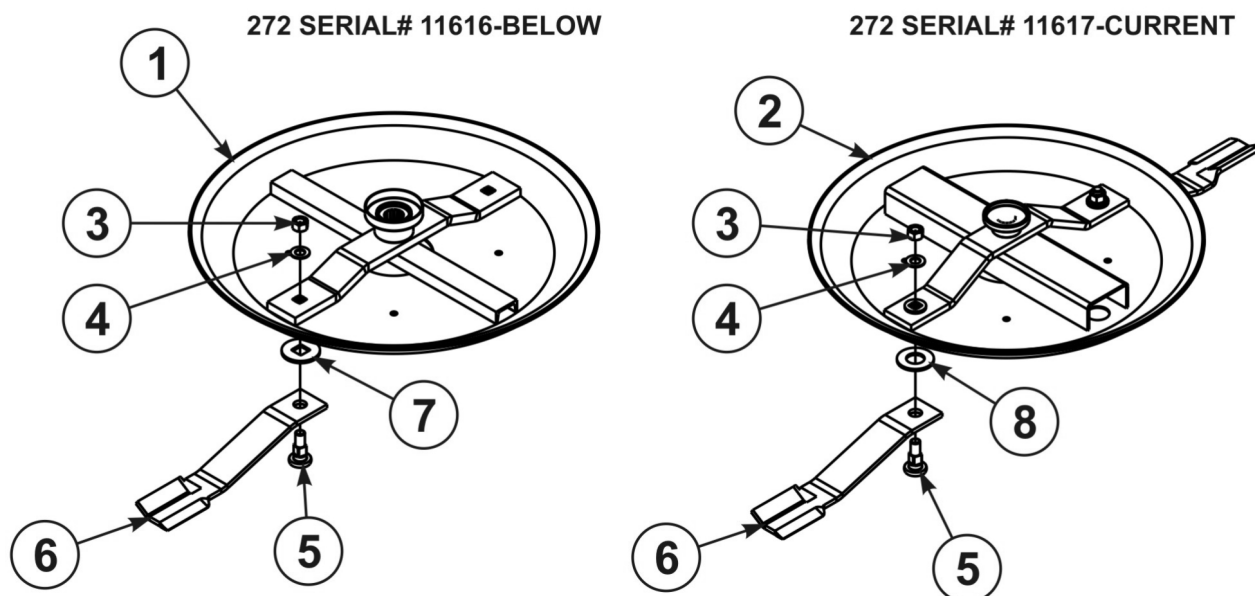


ITEM	PART NO.	QTY.	DESCRIPTION
1	00780622	1	WLDMT, BLADE PAN 272 (SERIAL# 11616-BELOW)
2	00786485	1	WLDMT, BLADE PAN 272 (SERIAL# 11617-CURRENT)
3	5GL16140	4	LOCKNUT 1 -14 LH TLN PL
4	571045	4	WASHER, HARDENED
5	571044	4	BOLT SHOULDER
6	00757830	2	BLADE, HIGH SUCTION TWISTED
	0652010030	2	BLADE, FLAT
	00780882	2	BLADE, CCW FAN 22-1/2 CTR-TIP 260 & 272
7	00780945	4	WASHER 1-5/64 SQ HOLE X 3 OD
8	00779283	4	WASHER, HARDENED BLADE WEAR

 BLADE PAN ASSEMBLY - RX84

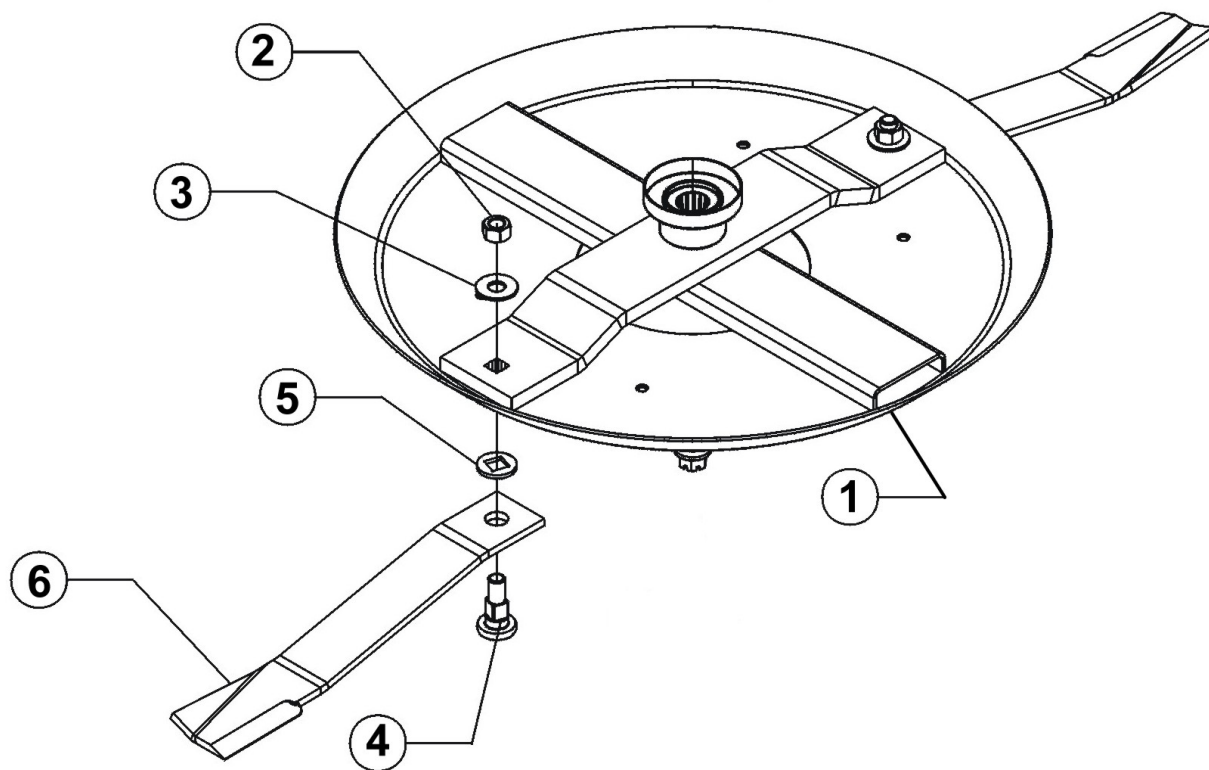


ITEM	PART NO.	QTY.	DESCRIPTION
1	00786649	1	WELDMENT, BLADE CARRIER
2	5GL16140	2	LOCKNUT
3	571045	2	WASHER 1 STRUCURAL
4	571044	2	BOLT, SHOULDER BLADE
5	00778047	2	BLADE WASHER
6	0582010330	2	BLADE, CCW FAN ROTARY MOWER
	582013A	2	BLADE, FLAT
	00757833	2	BLADE, HIGH SUCTION TWISTED

 CASTER WHEEL AND HUB ASSEMBLY

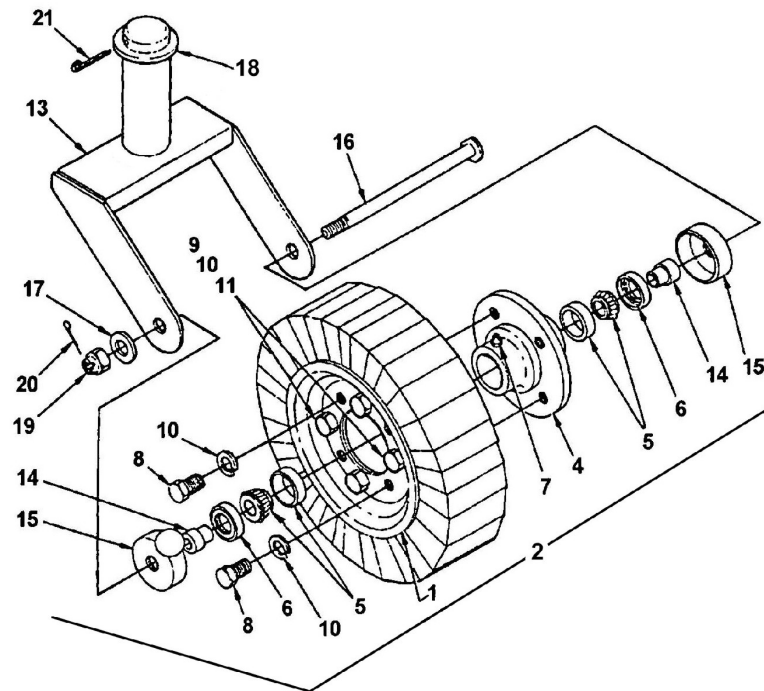


ITEM	PART NO.	QTY.	DESCRIPTION
	00776220	1	CASTER WHEEL AND HUB ASSEMBLY
1	373024H	1	TIRE WHEEL ASSEMBLY
2	00780238	1	TAILWHEEL HUB ASSEMBLY INCLUDES ALL ITEMS EXCEPT 1, 13, 21, & 18
4	00776214	1	HUB
5	00776213	2	BEARING CONE & CUP
6	00776219	2	OIL SEAL
7	00772082	1	GREASE FITTING (THREADED)
8	00776216	4	BOLT
9	7A6166	4	BOLT
10	00776215	4	FLATWASHER
11	00012101	4	LOCKWASHER
12	00013901	4	NUT
13	0585020210A	1	CASTER FORK WELDMENT
14	00772017	2	BUSHING
15	00772018	2	DUST CAP
16	00776211	1	SPINDLE BOLT
17	02822500	1	WASHER
18	15B2400	1	FLATWASHER
19	00776212	1	CASTELLATED NUT
20	00771620	1	COTTER PIN
21	00758899	1	COTTER PIN

 CHAINGUARD ASSEMBLY - DOUBLE FRONT RX84

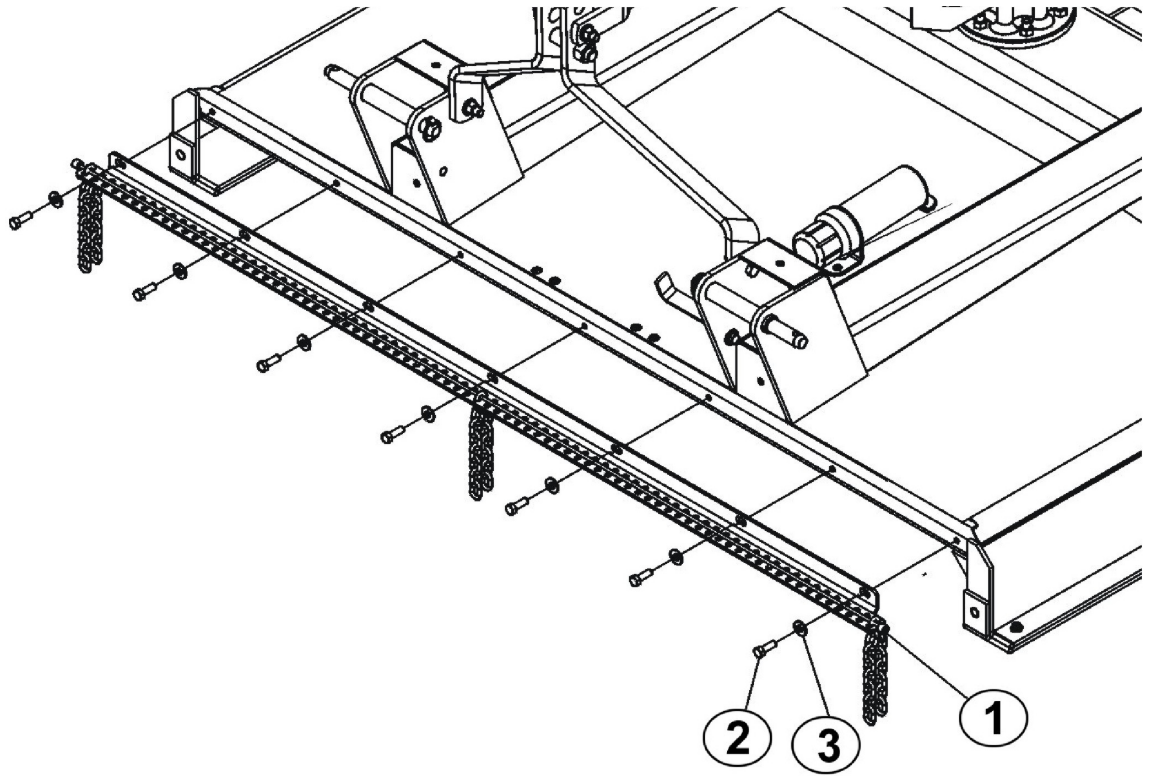


ITEM	PART NO.	QTY.	DESCRIPTION
1	00785248	1	ASY,FRONT DOUBLE CG-RX84
2	00748823	7	HHCS 1/2-13UNC 1-1/2 PL5
3	00002700	7	FLATWASHER 1/2 PL STD

 CHAINGUARD ASSEMBLY - DOUBLE REAR RX84

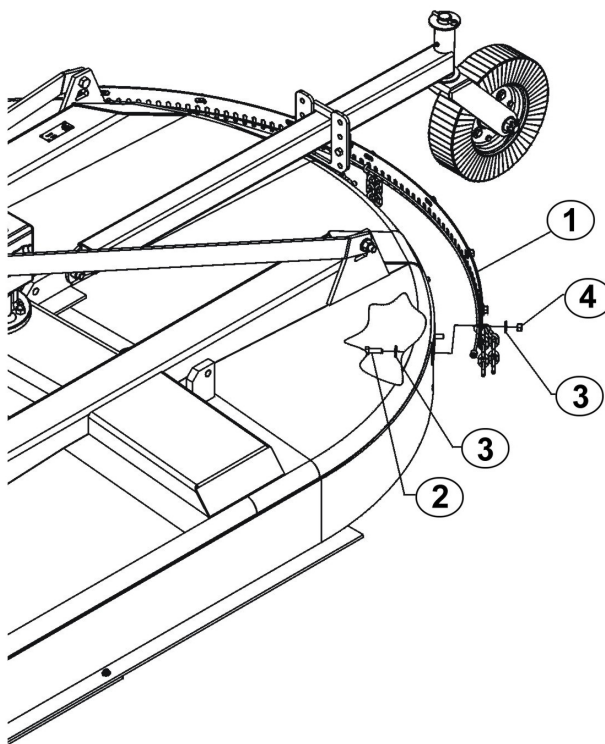


ITEM	PART NO.	QTY.	DESCRIPTION
1	00785249	1	ASY,REAR DOUBLE CG-RX84
2	00748823	9	HHCS 1/2-13UNC 1-1/2 PL5
3	00002700	18	FLATWASHER 1/2 PL STD
4	00001800	9	LOCKNUT TLM 1/2 NC PLB

 CHAINGUARD ASSEMBLY - FRONT

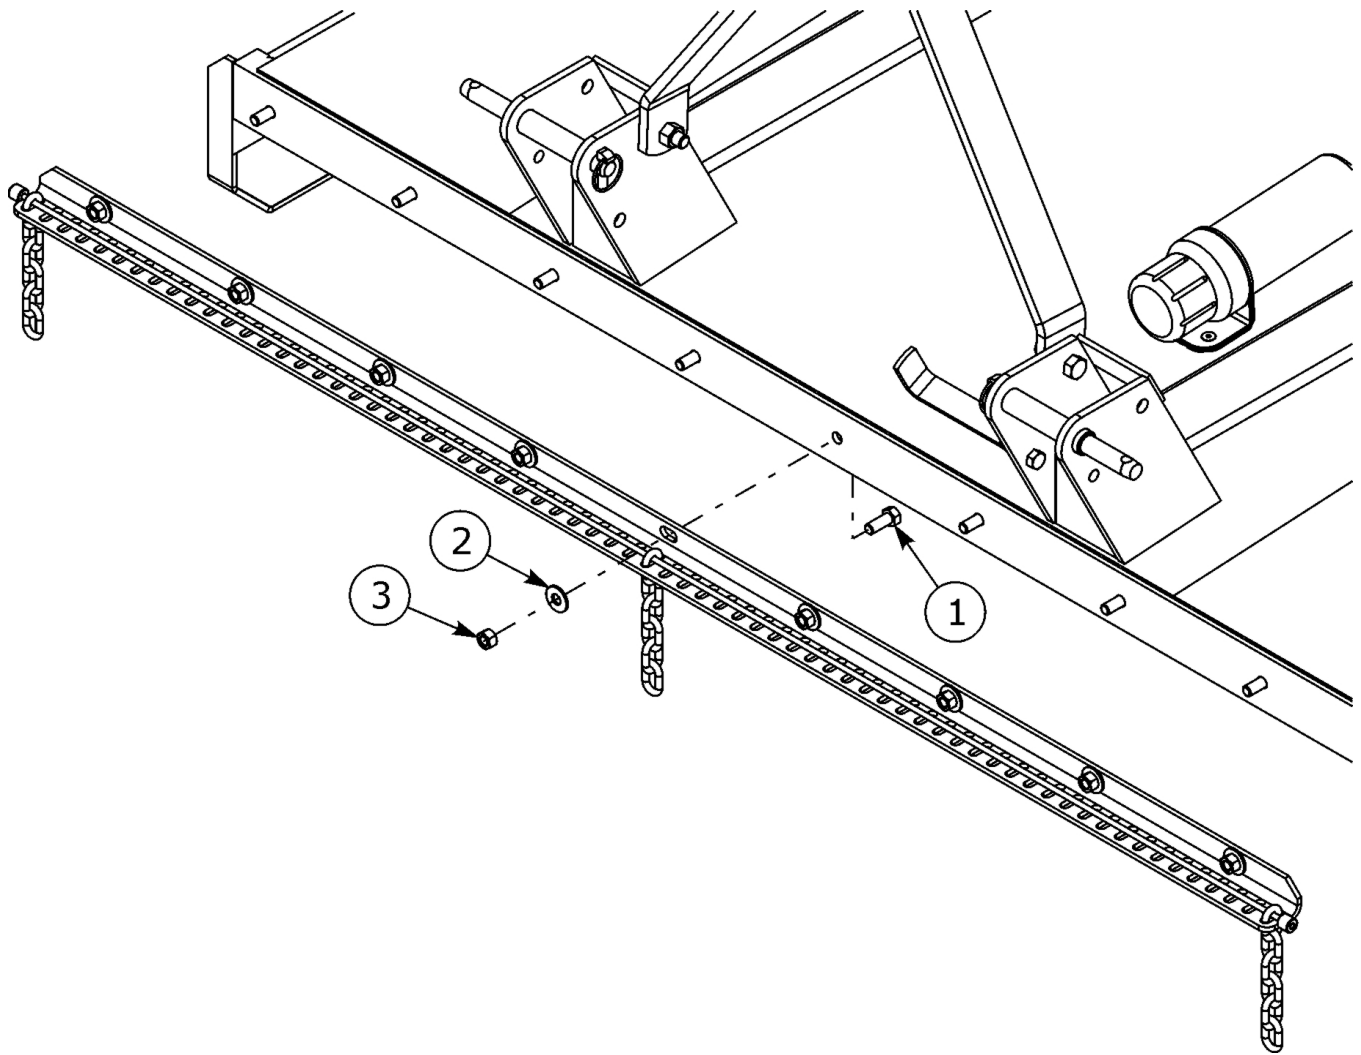


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781209	1	FLAT, FRONT C.G. BRACKET - RX72
	00781249	1	FLAT, FRONT C.G. BRACKET - RX60
	00781265	1	FLAT, FRONT C.G. BRACKET - RX84
2	00002700	5	FLATWASHER 1/2 PL STD - RX60 RX72
	00002700	7	FLATWASHER 1/2 PL STD RX84
3	00748823	5	HHCS 1/2-13UNC 1-1/2 PL5 - RX60 RX72
	00748823	7	HHCS 1/2-13UNC 1-1/2 PL5 - RX84

 CHAINGUARD ASSEMBLY - REAR

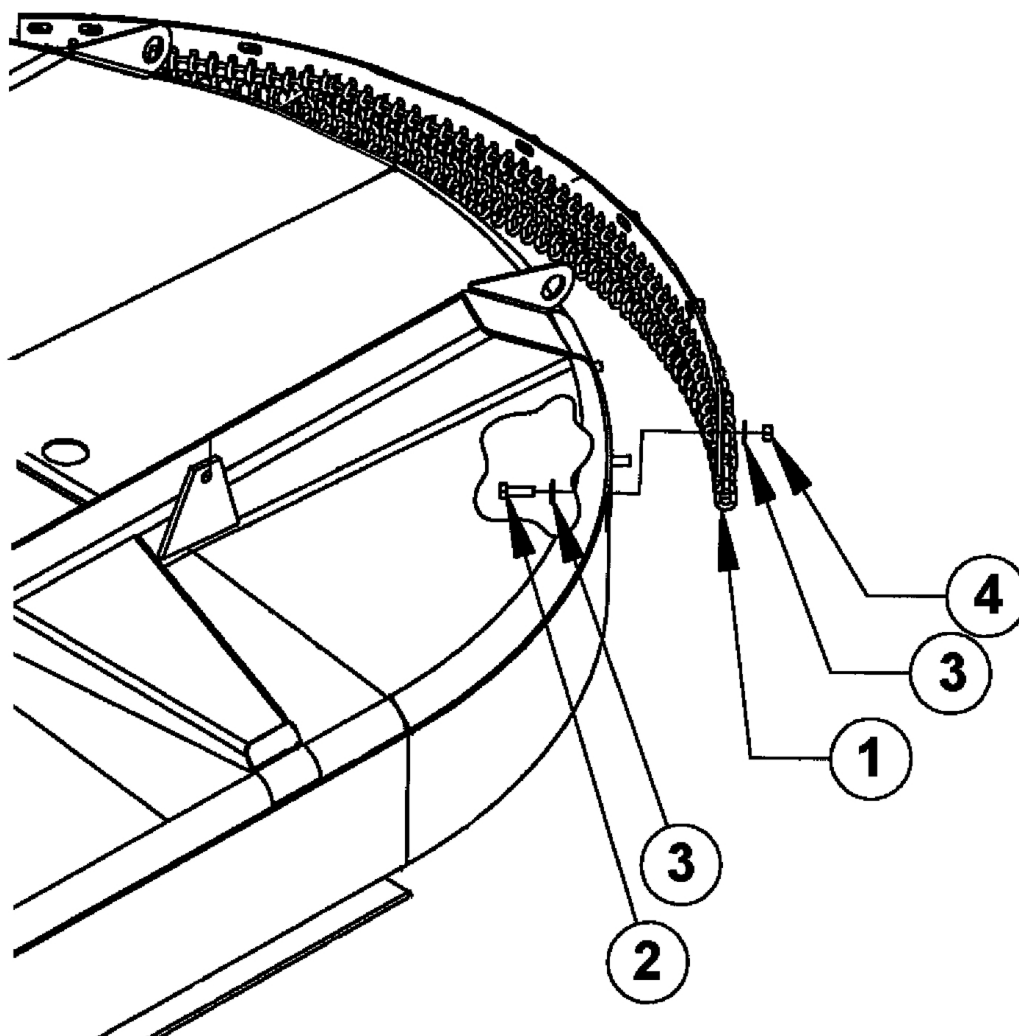


ITEM	PART NO.	QTY.	DESCRIPTION
1	00785229	1	BRACKET,REAR CHAIN GUARD - RX72
	00785230	1	ASY,REAR CHAIN GUARD - RX60
	00781264	1	BRACKET,REAR CHAIN GUARD - RX84
2	00748823	9	HHCS 1/2-13UNC 1-1/2 PL5 - RX84 RX72
	00748823	7	HHCS 1/2-13UNC 1-1/2 PL5 - RX60
3	00002700	18	FLATWASHER 1/2 PL STD - RX84 RX72
	00002700	14	FLATWASHER 1/2 PL STD - RX60
4	00001800	9	LOCKNUT TLM 1/2 NC PLB - RX84 RX72
	00001800	7	LOCKNUT TLM 1/2 NC PLB - RX60

 DEFLECTOR ASSEMBLY - FRONT

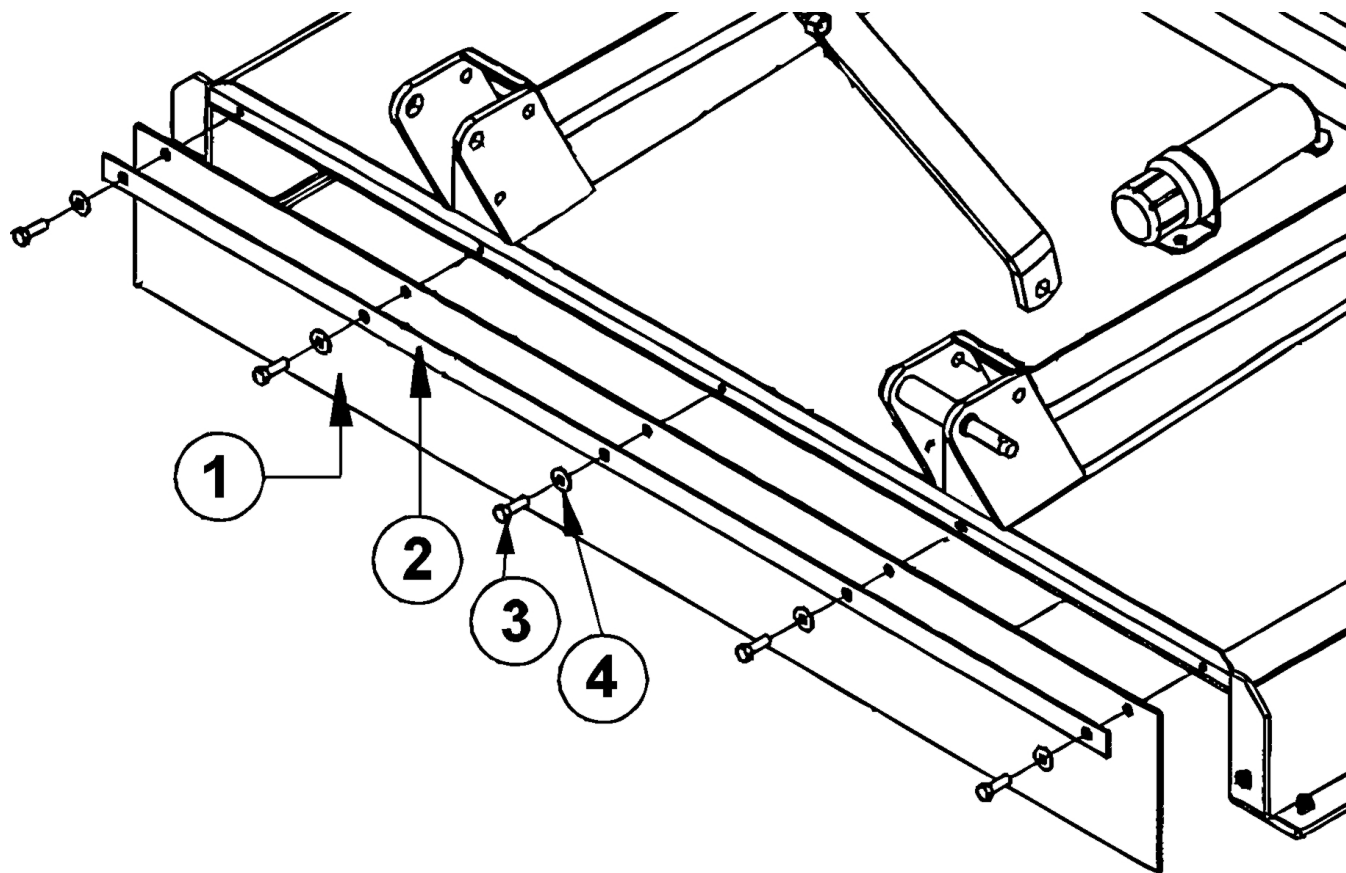


ITEM	PART NO.	QTY.	DESCRIPTION
1	00780879	1	PANEL, FRONT RUBBER DEFLECTOR - RX72
	00781039	1	PANEL, FRONT RUBBER DEFLECTOR - RX60
	00781119	1	PANEL, FRONT DEFLECTOR - RX84
2	00780881	1	FLAT, DEFLECTOR STRAP - RX72
	00781041	1	FLAT, DEFLECTOR STRAP - RX60
	00781144	1	FLAT, FRONT DEFLECTOR STRAP - RX84
3	00748823	5	HHCS 1/2-13UNC 1-1/2 PL5 - RX60 RX72
	00748823	7	HHCS 1/2-13UNC 1-1/2 PL5 - RX84
4	00002700	5	FLATWASHER 1/2 PL STD - RX60 RX72
	00002700	7	FLATWASHER 1/2 PL STD - RX84

 DEFLECTOR ASSEMBLY - REAR

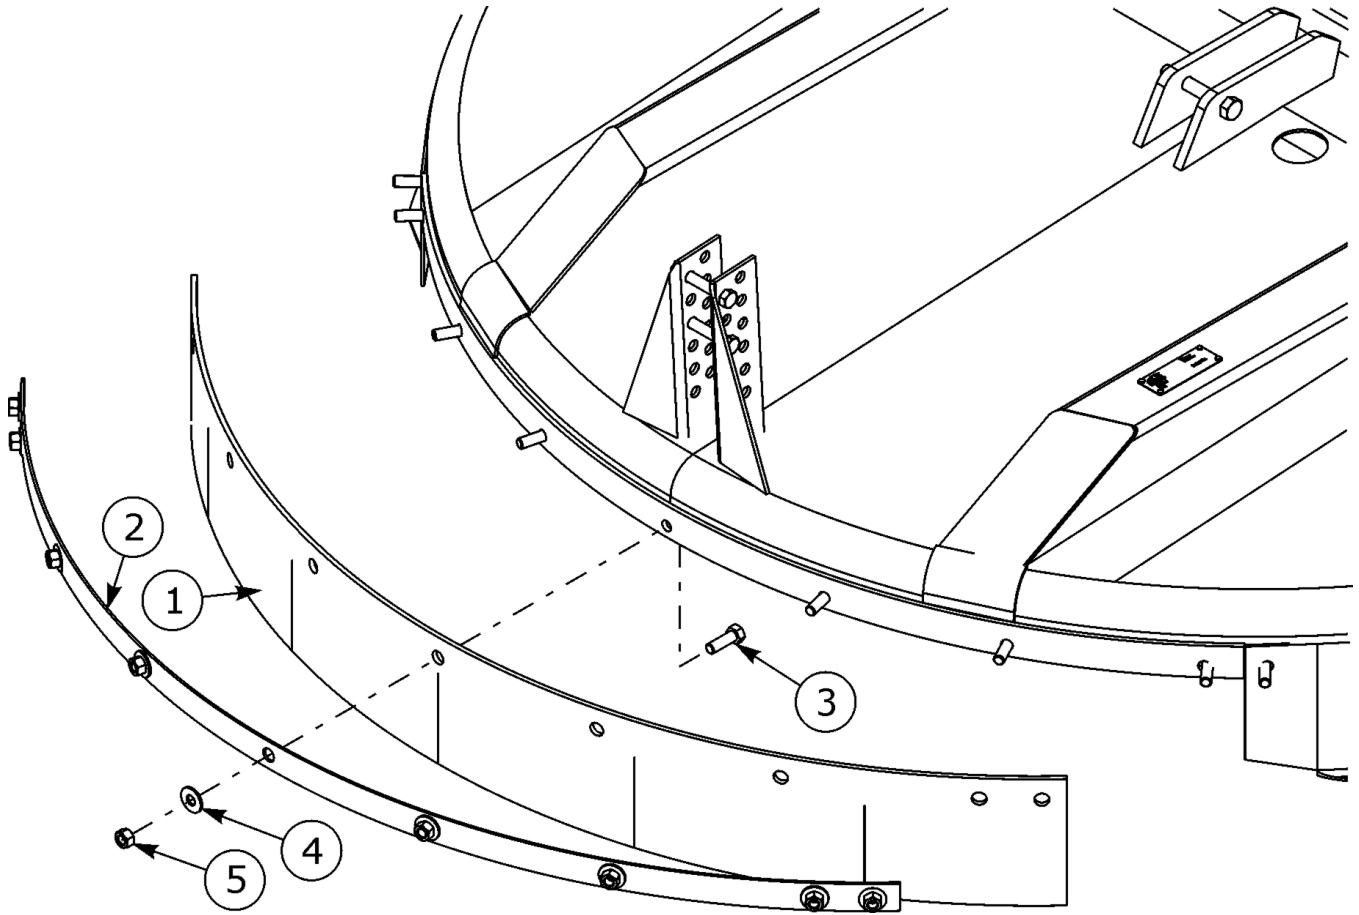


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781231	1	PANEL, REAR RUBBER DEFLECTOR - RX72
	00781229	1	PANEL, REAR RUBBER DEFLECTOR - RX60
	00781079	1	PANEL, REAR DEFLECTOR - RX84
2	00781232	1	FLAT, REAR DEFLECTOR STRAP - RX72
	00781230	1	FLAT, REAR DEFLECTOR STRAP - RX60
	00781131	1	FLAT, REAR DEFLECTOR STRAP - RX84
3	00748823	9	HHCS 1/2-13UNC 1-1/2 PL5 - RX72 RX84
	00748823	7	HHCS 1/2-13UNC 1-1/2 PL5 - RX60
4	00002700	18	FLATWASHER 1/2 PL STD - RX72 RX84
	00002700	14	FLATWASHER 1/2 PL STD - RX60
5	00001800	9	LOCKNUT TLM 1/2 NC PLB - RX72 RX84
	00001800	7	LOCKNUT TLM 1/2 NC PLB - RX60

 DRIVELINE ASSEMBLY CV

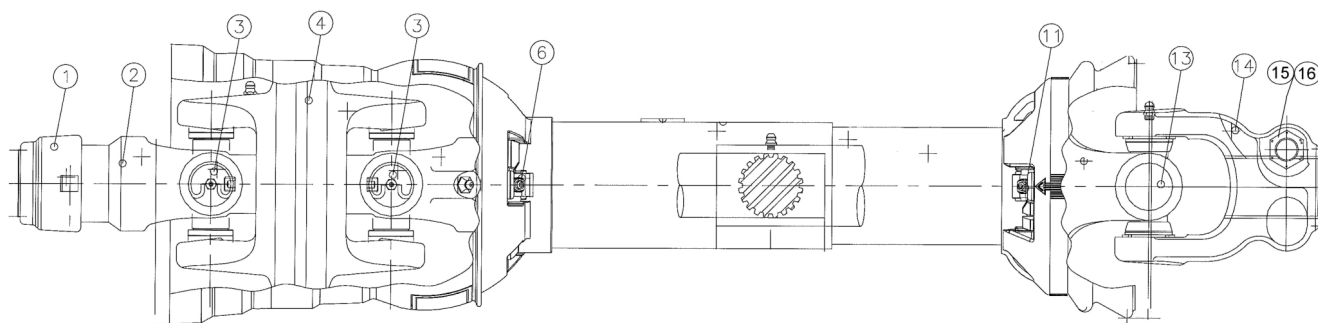


ITEM	PART NO.	QTY.	DESCRIPTION
	00779504	1	DRIVELINE ASSEMBLY CV
1	2716820	1	REPAIR KIT
2	00779522	1	ASY,SAFETY SLIDE LOCK YOKE
3	00779521	2	KIT,CROSS & BEARING
4	00779520	1	HOUSING,CENTER
6	00779051	1	GUARD REPAIR KIT (NOT SHOWN)
11	00780376	1	NYLON BEARING & KEEPER
13	00779519	1	KIT,CROSS & BEARING
14	00779518	1	YOKE
15	02956948	1	LOCKNUT 5/8 NC PLC
16	00765690	1	HHCS 5/8-11UNC 3LG GR8 PL
	00779523	1	ASY,JOINT & TUBE 1/2 W/GUARD
	00779524	1	ASY,JOINT & SHAFT 1/2 W/GUARD
	00779525	1	ASY,GUARD SET

 DRIVELINE ASSEMBLY LIFT - RX60, RX72, RX84

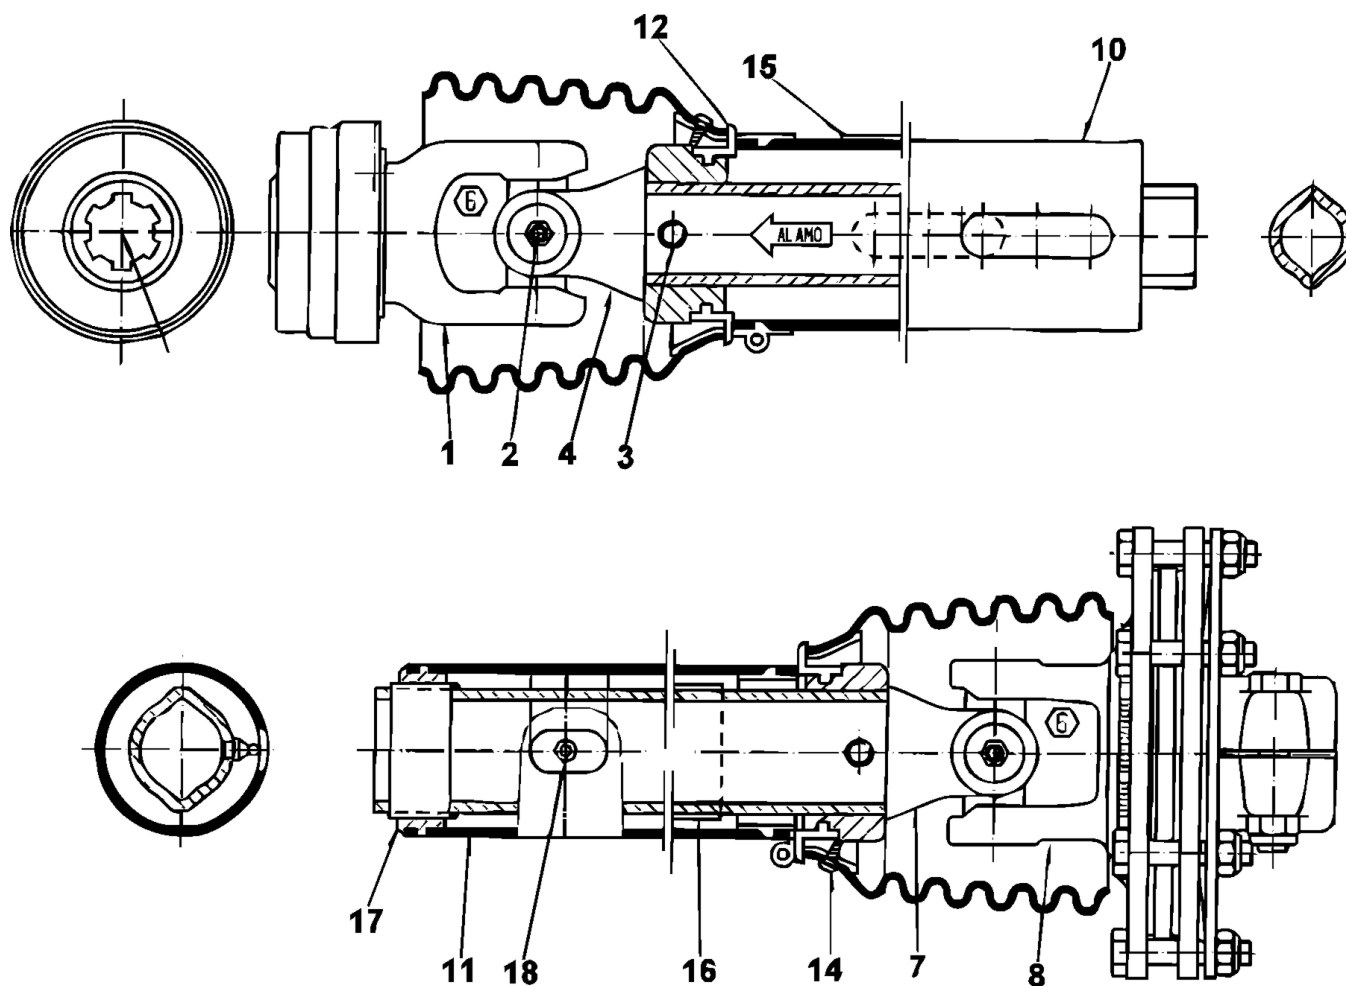


ITEM	PART NO.	QTY.	DESCRIPTION
	00781390	1	DRIVELINE CAT4 1-3/4-20 SPLINE
1	00779516	1	YOKE 1 3/8" -6SPL
2	00779517	2	CROSS & BEARING KIT
3	00756934	2	PIN,ROLL 10 X 80
4	8982	1	YOKE INBOARD
7	8387	1	INBOARD YOKE
8	00779512	1	FRICTION CLUTCH
12	8393	2	BEARING RING
14	00759217	2	SCREW 1/2 LG #8 PAN
15	00756005	1	DECAL-ROTATING DRIVELINE
16	00756004	1	DECAL-SHIELD MISSING
17	8974	1	SUPPORT BEARING
18	1416601	1	ZERK
	00779533	1	SHIELD KIT INCLUDES ITEMS 10, 11, 12, 14 & 15

 DRIVELINE ASSEMBLY LIFT CAT-5 - RX84

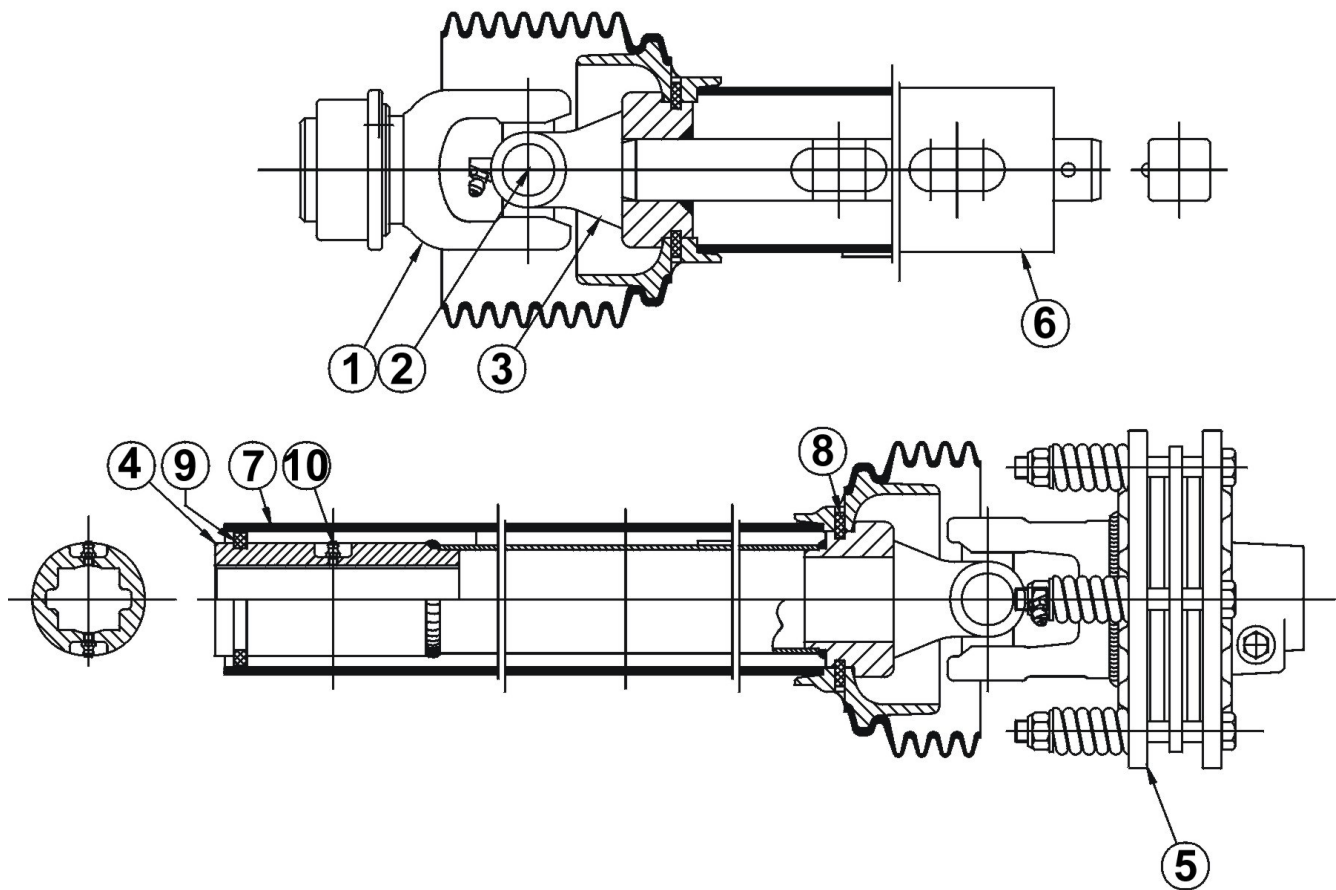


ITEM	PART NO.	QTY.	DESCRIPTION
	00781406	1	ASY,DRIVELINE W/CLUTCH,540RPM
1	W821A	1	YOKE 44 1-3/8-6 SLID
2	W840	2	KIT,CROSS SAME AS P
3	W816F	1	YOKE SHAFT PAINT BLA
4	00775344	1	YOKE, I.B. TUBE & SLEEVE W.A.
5	00779357	1	COMPT. CLUTCH HUB 1440 1350MM
6	00775345	1	OUTER SHIELD TUBE ASSY
7	00775346	1	INNER SHIELD TUBE ASSY
8	00775347	1	SHIELD BEARING
9	00775348	4	SUPPORT BEARING
10	00752670	2	FITTING,GREASE STRAIGHT 1/4-28

 DRIVELINE JACKSHAFT ASSEMBLY - RX84

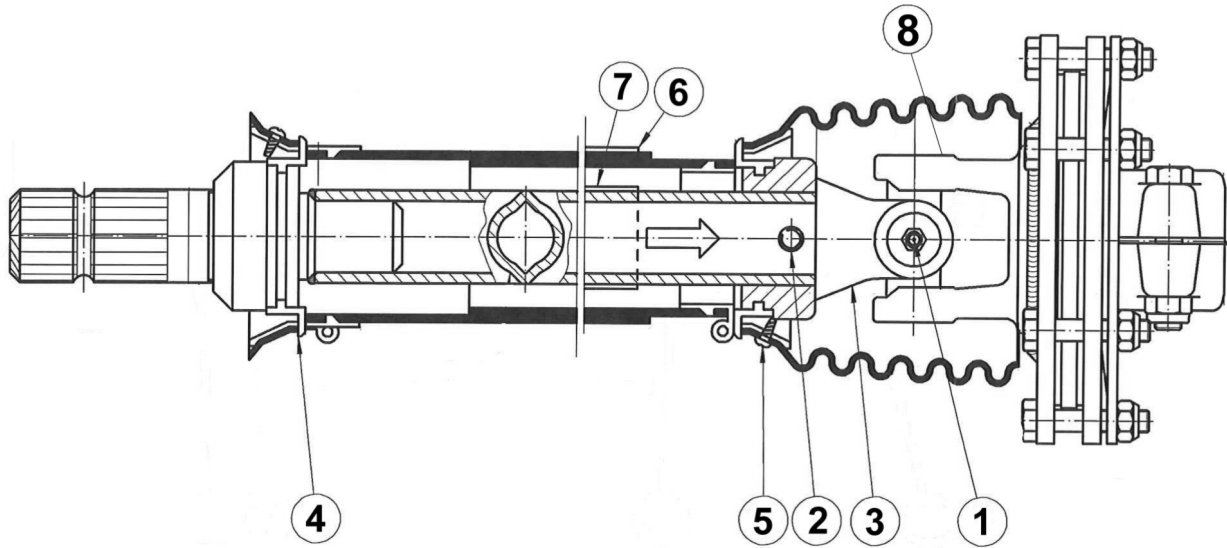

ITEM	PART NO.	QTY.	DESCRIPTION
	00785491	1	JACKSHAFT
1	00779517	1	CROSS & BEARING KIT
2	00756934	1	SPRING PIN 10 X 80
3	8982	1	INBOARD YOKE 1B
4	8393	2	BEARING RING SC25
5	00759217	2	SCREW- IN ITEM 7 & 8
6	00756005	1	DECAL OUT. -IN ITEM 9
7	00756004	1	DECAL INN. -IN ITEM 1
	00774208	1	CC LOCK ASSY - IN ITEM 6
8	00779512	1	CLUTCH

 GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11616 - BELOW

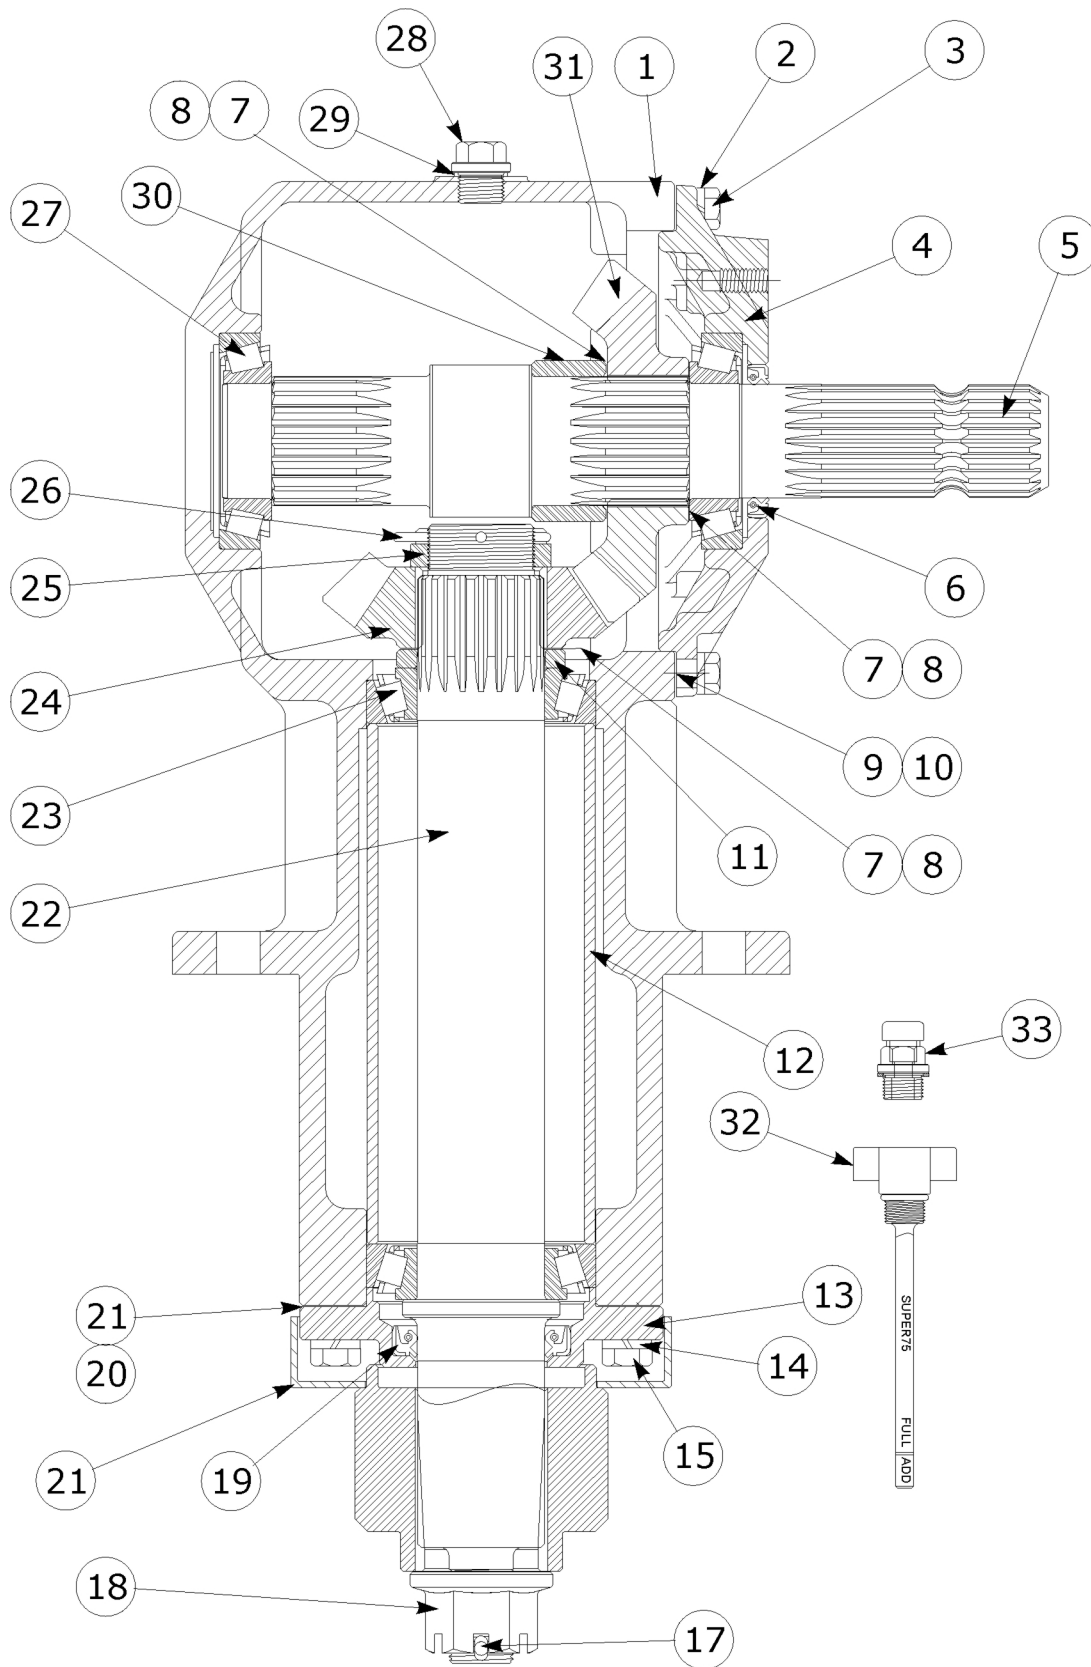


RX60 - RX72 - RX84 (01-10) Rev 05-11

GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11616 - BELOW

Continued...

ITEM	PART NO.	QTY.	DESCRIPTION
	00780880P	1	ASY,GEARBOX, SUPER 75 1:1.6 SU
1	00781380	1	HOUSING 75 SERIES E.O.
2	00755954	8	LOCKWASHER M10
3	00758659	8	HEXB METRIC 10-P1.5 - 32MM PL5
4	00758664	1	CAP,INPUT IEG 20-001
5	00758689	1	SHAFT,INPUT
6	00758653	1	SEAL 1-3/4IDX2.378OD
7	00758667	1	SHIM .012 2.44 O.D.
8	00758668	1	SHIM,0.020 2.44 O.D.
9	00758646	1	SHIM, ADJUSTMENT - .004"
10	00758647	1	SHIM, ADJUSTMENT - .010"
11	00759977	1	SPACER GEAR MOUNT I
12	00781381	1	OUTPUT SPACER
13	00758663	1	CAP,OUTPUT IEG #20-002
14	00758672	4	LOCKWASHER,M12 IEG 07-002
15	02959661	4	HEXB, M12-P1.75 X 35MM PL8.8
17	00606000	1	PIN,COTTER 3/16X2
18	00758692	1	NUT SLOTTED HEX FLG 1-14UNS PL
19	00758674	1	SEAL,OUTPUT SHAFT 50
20	00758676	1	GASKET, .004 OR .1M
21	00758677	1	GASKET, .010 OR .25
22	00781382	1	OUTPUT SHAFT
23	00769938	2	BEARING #30210
24	00758698	1	GEAR,15 TOOTH
25	00762121	1	NUT,HEX THIN SLOTTED
26	00026200	1	PIN,COTTER 5/32 X 1-1/2
27	00755615	2	BEARING
28	00770737	2	LEVEL PLUG M18 X 1.5
29	00769321	3	WASHER,SEALING,17.8M
30	00758657	1	SPACER,INPUT SHAFT
31	00758701	1	GEAR,24 TOOTH
32	00778907	1	ASY,DIP STICK
33	00762114	1	PLUG,VENT W/WASHER 18M-P1.5

 GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11617 - CURRENT

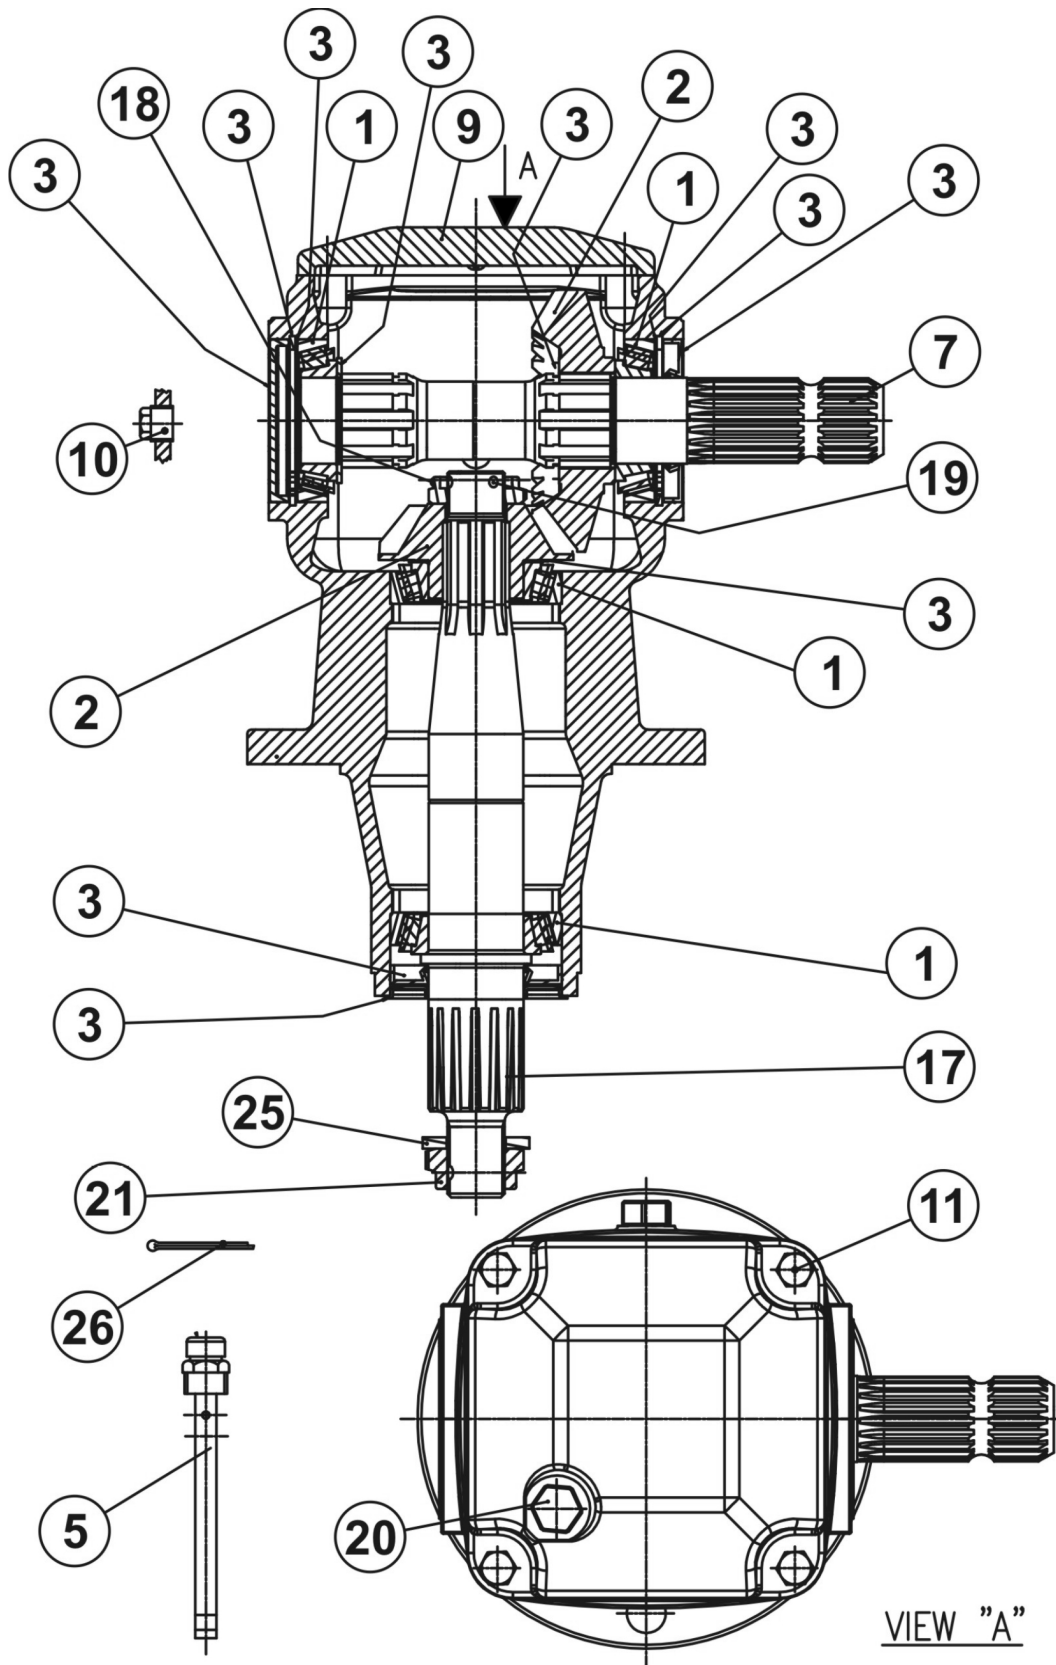


GEARBOX ASSEMBLY - RX60, RX72 - SERIAL 11617 - CURRENT

Continued...

ITEM	PART NO.	QTY.	DESCRIPTION
	00785788	1	ASY,GEARBOX - NON-LUBED - GEAR IN FRONT 540 RPM,1:1.50 RATIO,1-3/4-20 SPLINE
1	00786292	1	KIT,ROLLER BEARING
2	00786293	1	KIT,GEAR SET
3	00786294	1	KIT,SEAL & SHIM
5	00758484	1	DIPSTICK VENT PLUG 1/2" - FILL
7	00786287	1	SHAFT,INPUT - 1-3/4-20 SPL.
9	00786305	1	COVER,GEAR BOX
10	00755633	1	PLUG,SOLID GAS - 3/8"
11	00754764	4	HEXB M10 X 1.25 X 20 PL.8.8
17	00786288	1	SHAFT,OUTPUT
18	00755621	1	NUT,CASTLE - M30 X 1.5
19	70499	1	PIN,COTTER - B5 X 60
21	00755624	1	NUT,CASTLE - M30 X 2.0
25	00755623	1	WASHER,BOLT - 31 X 56 X 6
26	2716423	1	PIN,COTTER B6 X 60

 
GEARBOX ASSEMBLY - RX84 - SERIAL 10022 - BELOW

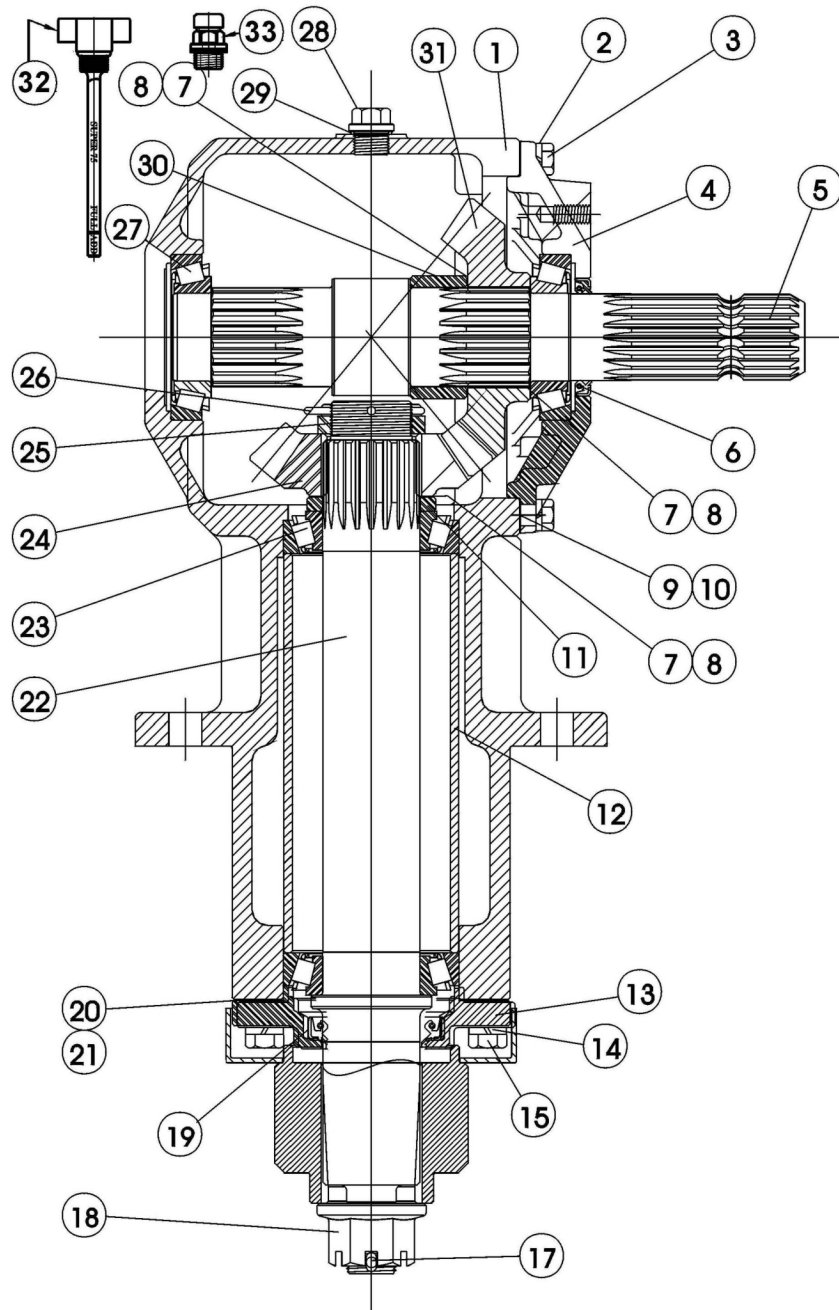

GEARBOX ASSEMBLY - RX84 - SERIAL 10022 - BELOW**Continued...**

ITEM	PART NO.	QTY.	DESCRIPTION
	00781080P	1	GEARBOX ASSEMBLY
1	00781380	1	HOUSING 75 SERIES E.O.
2	00755954	1	LOCKWASHER M10 SPRING
3	00758859	8	M10 X 1.5 X 30 HEX HEAD SCREW
4	00758664	1	CAP, INPUT IEG 20-001
5	00758689	1	SHAFT, INPUT
6	00758653	1	SEAL 1-3/4ID X 2.378OD
7	00758667	1	SHIM .012 2.44 O.D.
8	00758668	1	SHIM,0.020 2.44 O.D.
9	00758646	1	SHIM, ADJUSTMENT - .004
10	00758647	1	SHIM, ADJUSTMENT - .010
11	00759977	1	SPACER GEAR MOUNT I
12	00781381	1	OUTPUT SPACER
13	00758663	1	CAP,OUTPUT IEG #20-002
14	00758672	4	LOCKWASHER, M12 IEG 07-002
15	02959661	4	HEXB, M12-P1.75 X 35 MM PL8.8
17	00606000	1	COTTER PIN 3/16" X 2"
18	00758692	1	NUT SLOTTED HEX FLG 1-14 UNS PL
19	00758674	1	OUTPUT OIL SEAL
20	00758676	1	GASKET, .004 OR .1M
21	00758677	1	GASKET, .010 OR .25
22	00781382	1	OUTPUT SHAFT
23	00769938	1	BEARING #30210
24	00781088	1	GEAR, 16 TOOTH PINION
25	00762121	1	NUT, HEX, THIN SLOTTED
26	00026200	1	PIN,COTTER 5/32 X 1-1/2
27	00755615	1	BEARING #30209
28	00770737	1	LEVEL PLUG M 18 X 1.5
29	00769321	1	WASHER, SEALING
30	00758657	1	SPACER, INPUT SHAFT
31	00781089	1	GEAR, 22 TOOTH
32	00778907	1	ASSY-DIPSTICK FOR SUPER 75 GBS
33	00762114	1	PLUG,VENT, 18M-P1.5 5PSI

 
GEARBOX ASSEMBLY - RX84 - SERIAL 10023 - CURRENT

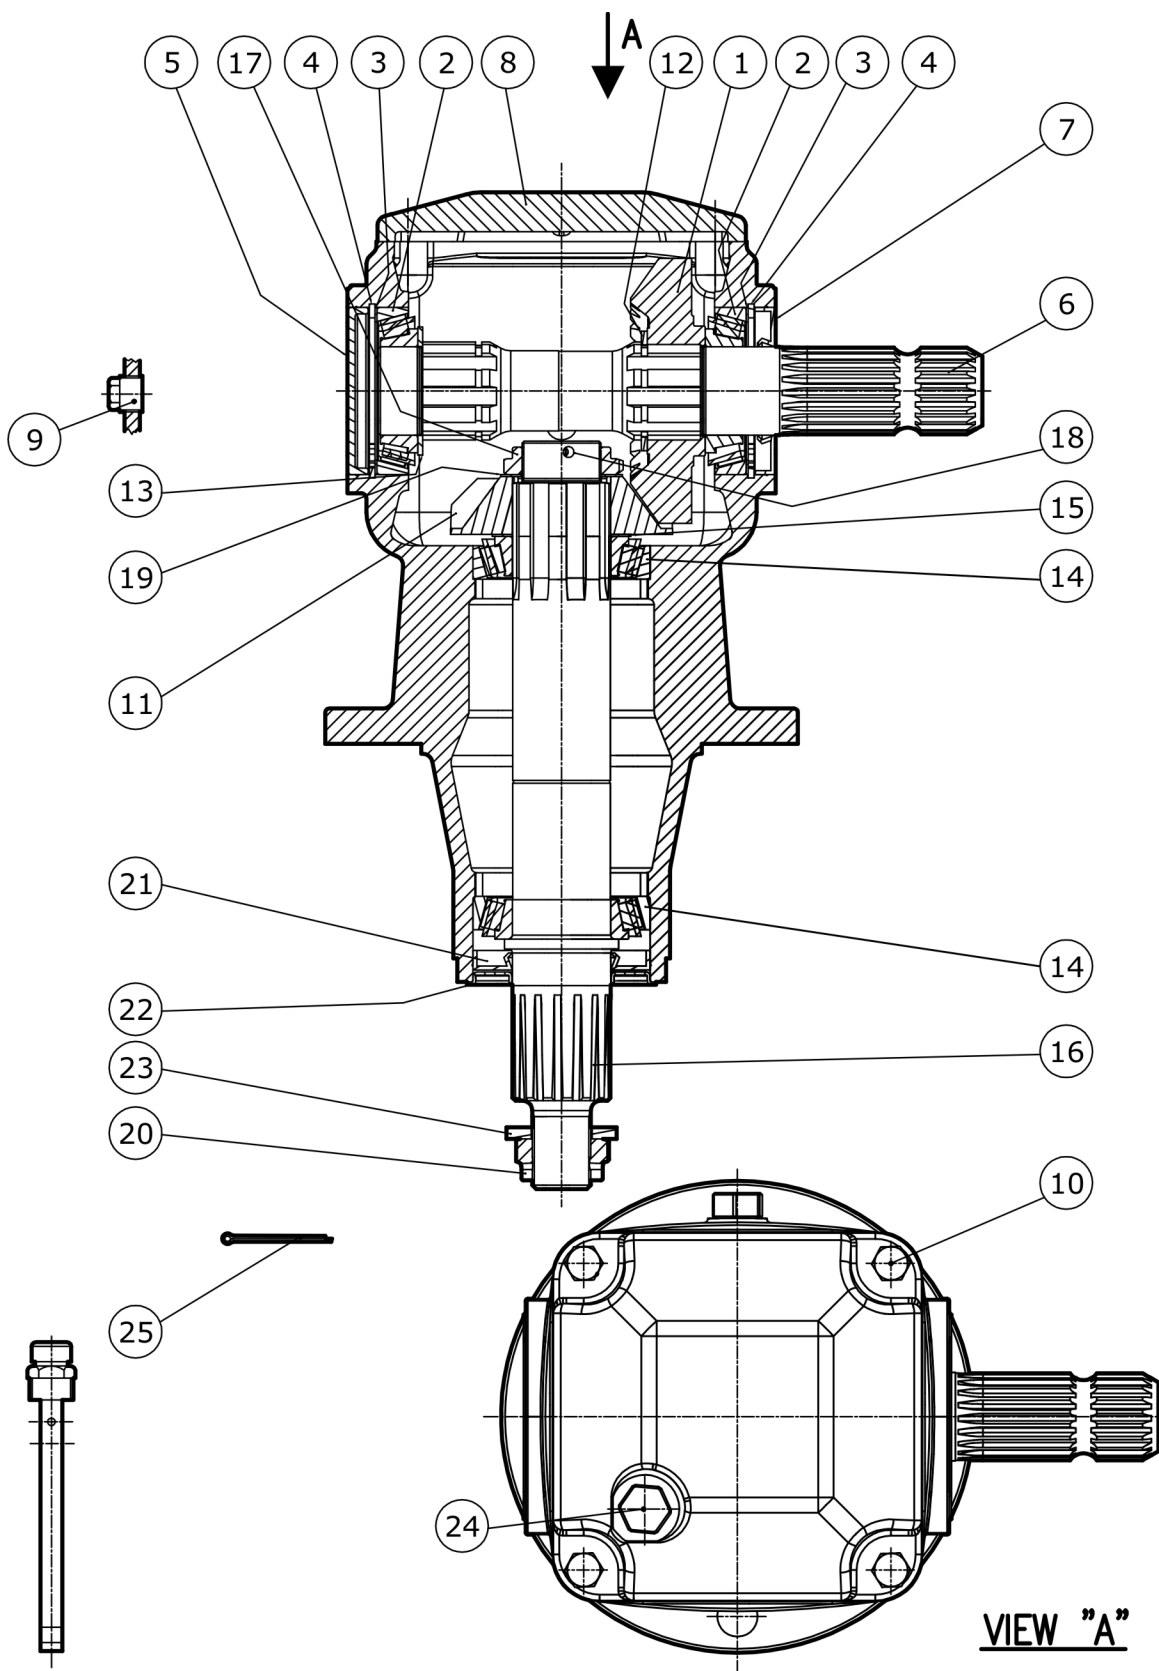

GEARBOX ASSEMBLY - RX84 - SERIAL 10023 - CURRENT**Continued...**


ITEM	PART NO.	QTY.	DESCRIPTION
	00785790	1	ASY, GEARBOX
1	00786296	1	GEAR,CROWN Z22 M6
2	00755615	2	BEARING,ROLLER - 30209
3	00755619	2	SHIM KIT - 70.3MM X 84.7MM
4	00755618	2	SNAP RING - 85MM X 88.5MM X 3MM
5	00755634	1	CAP,OIL - 85MM X 10MM
6	00786287	1	SHAFT,INPUT - 1-3/4-20 SPL.
7	00786291	1	SEAL,OIL - 45MM X 85MM X 10MM
8	00786305	1	COVER,GEAR BOX
9	00755633	1	PLUG,SOLID GAS - 3/8"
10	00754764	4	HEXB M10 X 1.25 X 20 PL.8.8
11	00786297	1	GEAR,PINION Z18 M6
12	2516460	1	SNAP RING - 50MM X 47MM X 3MM
13	00755632	1	SHIM KIT - 45.3MM X 65.3MM X 2.5MM
14	00769938	2	BEARING,ROLLER - 30210
15	00755622	1	SHIM KIT - 50.3MM X 70.3MM
16	00786295	1	SHAFT,OUTPUT
17	00756943	1	NUT,CASTLE - M40 X 1.5
18	70499	1	PIN,COTTER - B5 X 60
19	00786298	1	SHIM KIT - 40.3MM X 61.7MM X 1.0MM
20	00755624	1	NUT,CASTLE - M30 X 2.0
21	00755627	1	SEAL,OIL - 50MM X 90MM X 10MM
22	00755626	1	WASHER,PROTECTIVE
23	00755623	1	WASHER,BOLT - 31 X 56 X 6
24	00754336	1	1/2" GAS SOLID PLUG
25	2716423	1	PIN,COTTER B6 X 60
26	00786292	1	KIT,ROLLER BEARING
27	00786299	1	KIT,GEAR SET
28	00786294	1	KIT,SEAL & SHIM
29	00758484	1	DIPSTICK VENT PLUG 1/2" - FILL

 GEARBOX ATTACHMENT RX60, RX72 SERIAL 11616-BELOW, & RX84

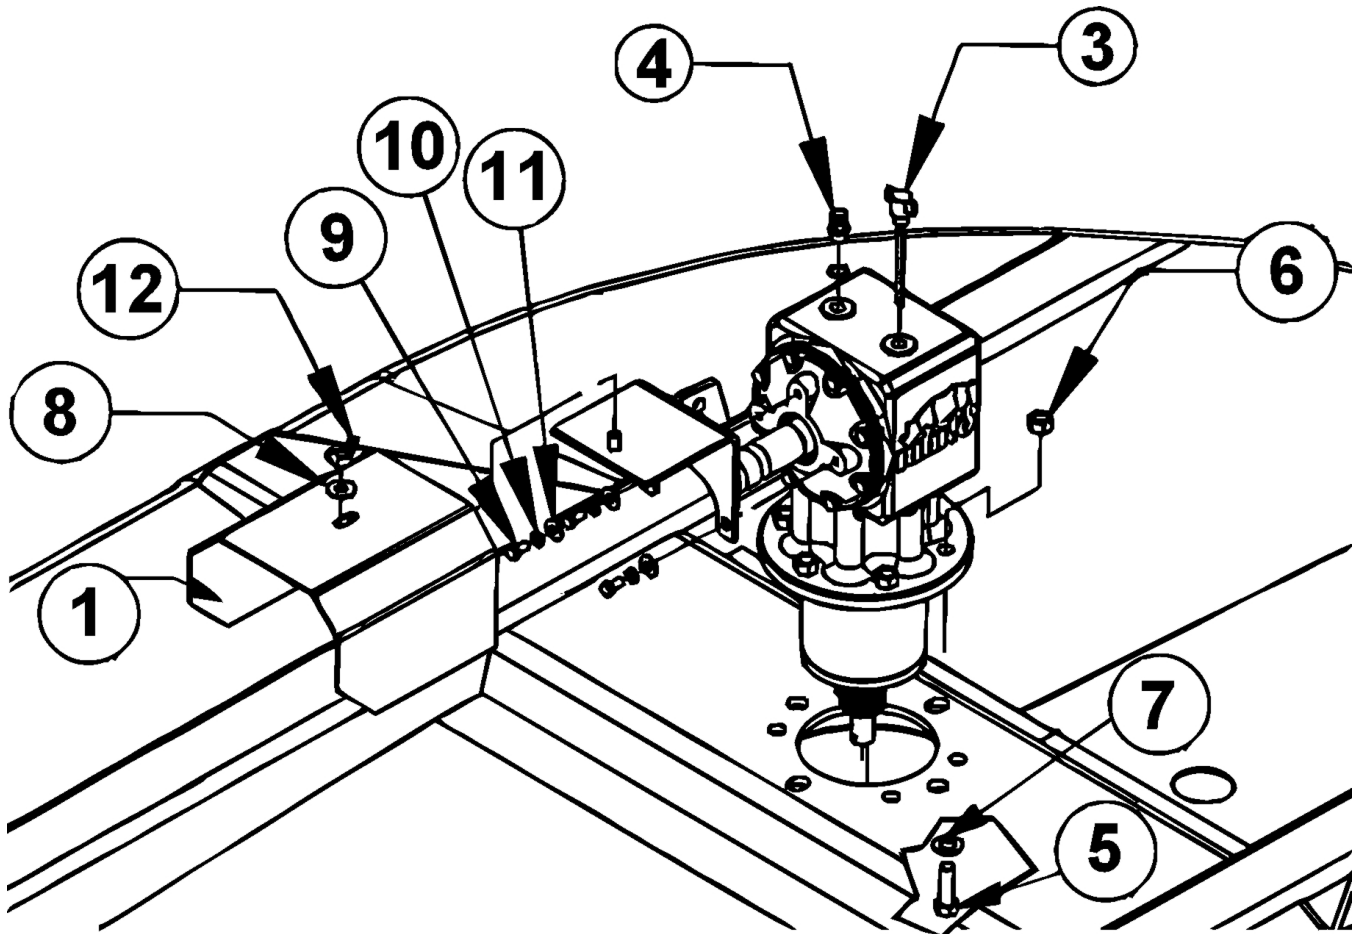


ITEM	PART NO.	QTY.	DESCRIPTION
1	00775571	1	WLDMT SHIELD
2	00775573	1	WLDMT BRKT SHIELD
3	00778907	1	ASSY-DIPSTICK FOR SUPER 75 GBS
4	00762114	1	PLUG, VENT W/WASHER 18M-P1.5
5	02845500	6	HEXB 5/8 NC 2 PL5
6	00695100	6	LOCKNUT TOPLOCK 5/8NC PLB
7	00756077	6	WASHER, 5/8 HARDENED
8	00002700	1	FLATWASHER 1/2 PL STD
9	00002000	3	HEX CAP 3/8-16 X 3/4 GR.5 ZP
10	00012101	3	LOCKWASHER 3/8 PL
11	00011100	3	FLATWASHER STD 3/8
12	5F8130	1	1/2 NC WING NUT

 GEARBOX ATTACHMENT RX72 SERIAL# 11617-CURRENT

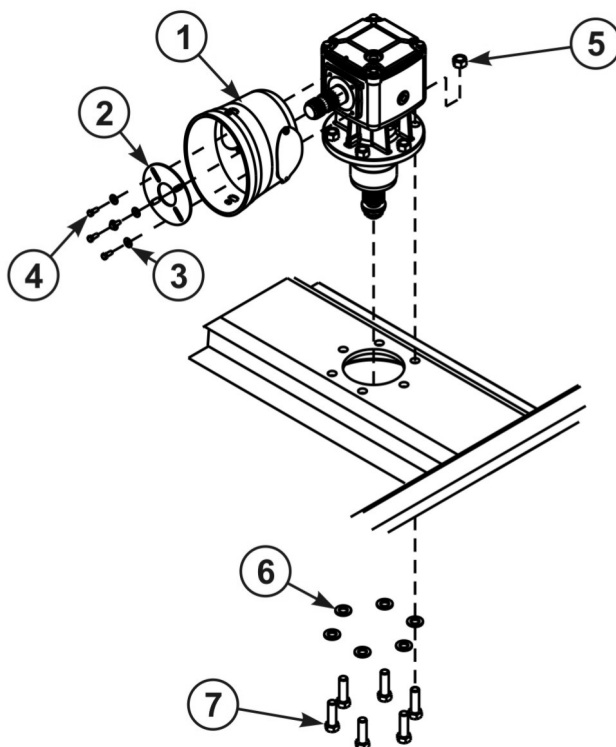


ITEM	PART NO.	QTY.	DESCRIPTION
1	00785575	1	GEARBOX SCHIELD, 4-1/8"-5" BC
2	00785574	1	RING,GB SHIELD INNER SUPPORT
3	00023500	4	FLATWASHER, 5/16" TYPE AW, ZP
4	02958784	4	BOLT METRIC 8-P1.25-20MM PL8.8
5	00037200	6	LOCKNUT, 3/4"-NC TLM PL C
6	5312316	6	WASHER, 3/4" HARDENED
7	00037100	6	HEXB 3/4" NC 2-1/2" PL5

 HYDRAULIC CYLINDER

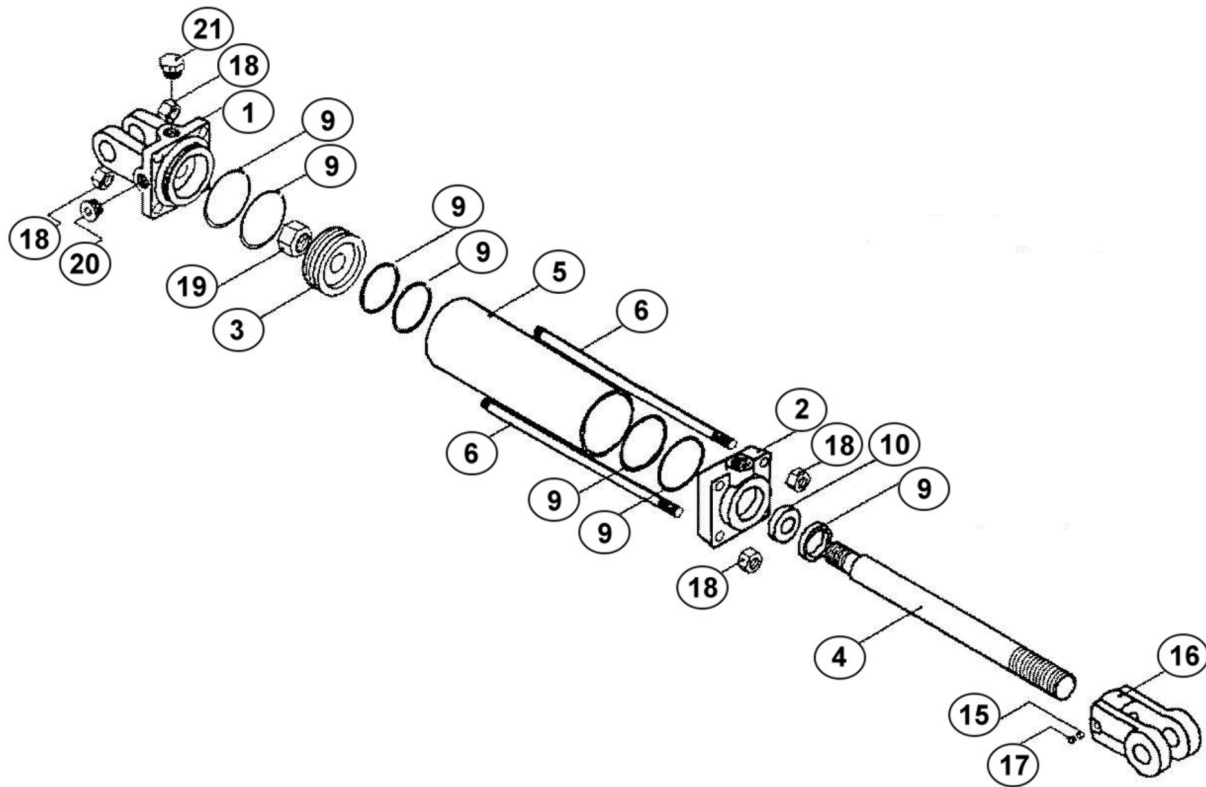



ITEM	PART NO.	QTY.	DESCRIPTION
	8727A	1	HYDRAULIC CYLINDER
1	00774729	1	CLEVIS CAP 2.5-3/4 ORB-1.00
2	00774734	1	ROD CAP 2.50-1.25-3/4 ORB
3	00774730	1	PISTON 2.5-0.75-S HALL W/RING
4	00774753	1	ROD CYL 1.25-08-0.75-1.25-A
5	3047111	1	CYLINDER TUBE
6	3047112	4	TIE ROD
9	00774760	1	SEAL KIT
15	3047117	1	THREAD LOCK
16	1917140	1	ROD CLEVIS
17	00774740	1	SC SCKT SET 3/8UNCX1/2 KNUR
18	33003H5C	8	HEX NUT 3/8-16 GR.5
19	5JRC12160	1	NUT TOPLOCK 3/4 NF PLC
20	1917132	1	SCKT HD O-RNG PLUG,3/4-16 UNF
21	2417154	1	BREATHER,CYLINDER #8 ORB

 SKID SHOE ASSEMBLY

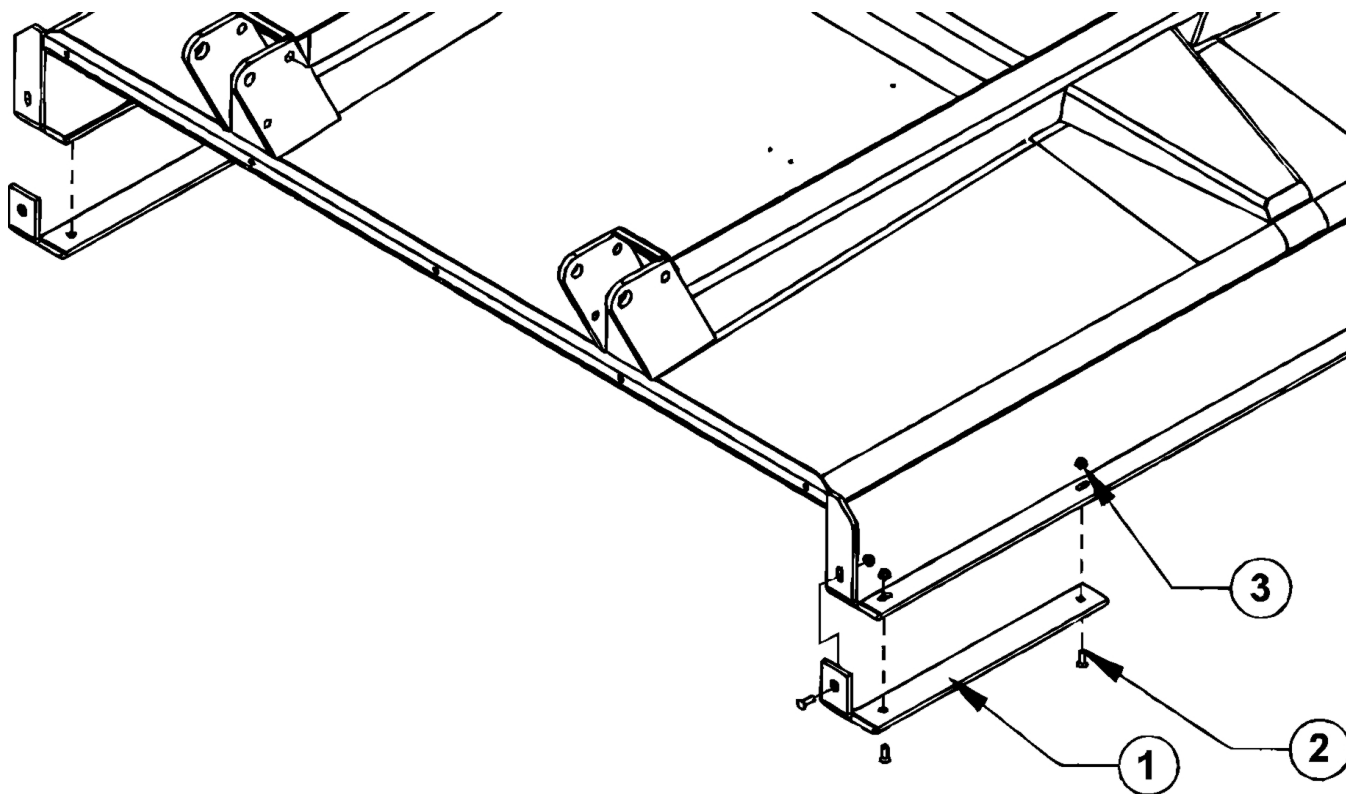


ITEM	PART NO.	QTY.	DESCRIPTION
1	00778905	2	SKID SHOE BAR
2	8277	6	PLOW BOLT 3/8 NC 1-1/4 #3 PL
3	4528	6	NUT, LOCK 3/8-16 FLG WHIZ

  SLIP CLUTCH ASSEMBLY - RX60, RX72, RX84

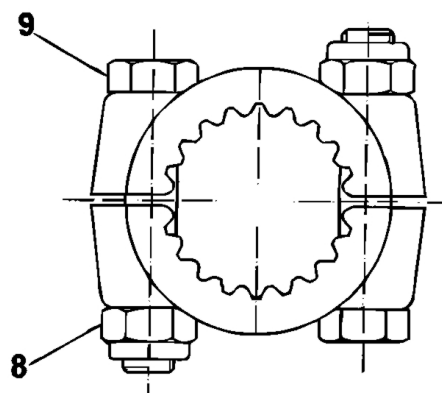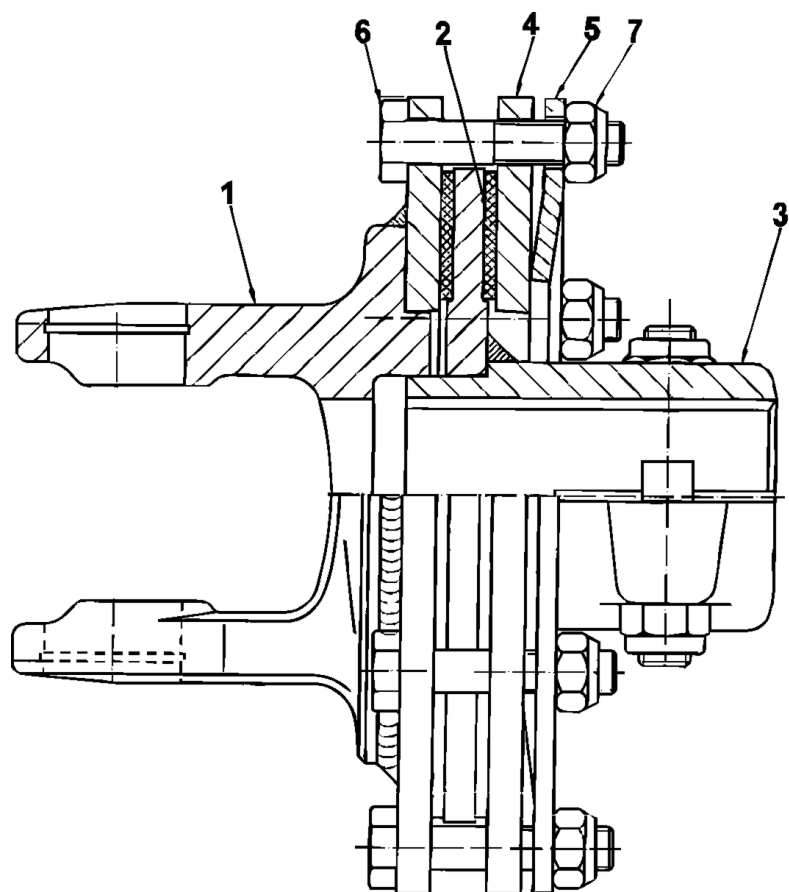


ITEM	PART NO.	QTY.	DESCRIPTION
	00779512	1	SLIP CLUTCH ASSEMBLY
1	00779511	1	FLANGE YOKE
2	00754202	2	RING,CLUTCH LINING
3	00775322	1	HUB 1 3/4-20 I.C.
4	00775323	1	PLATE, THRUST
5	00775324	1	SPRING, BELLEVILLE
6	61064C8	6	M10X1.5X50 GR.8.8 HEX CAPSCREW
7	00765961	6	NUT MET TLE 10MM-P1.5 PL
8	00772648	2	NUT,HEX TOP LOCK-M12 X 1.75
9	61076C8	2	M12X1.75X65 GR.8.8 HEX CAPSCRE

 SLIP CLUTCH ASSEMBLY CAT-5 - RX84

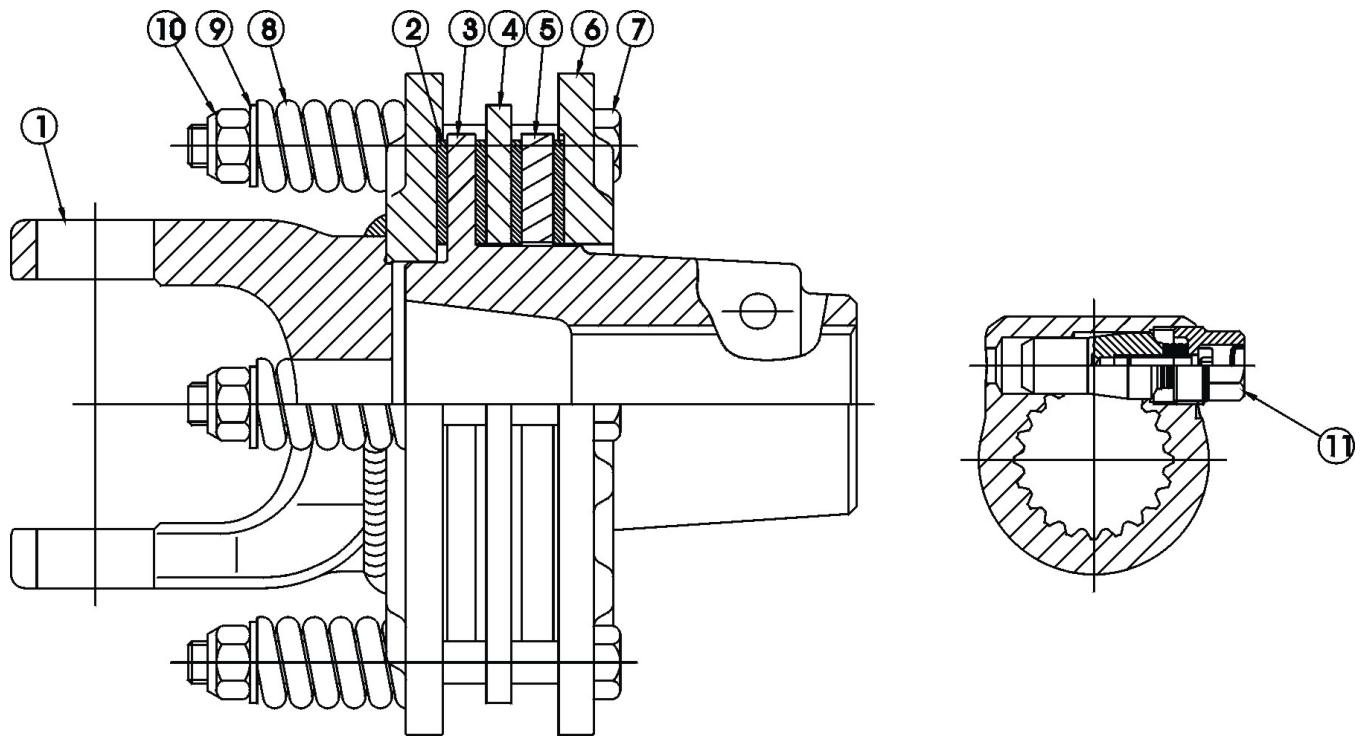


ITEM	PART NO.	QTY.	DESCRIPTION
1	00775383	1	YOKE FLANGE
2	0921000462	4	DISK, CLUTCH 5-15/16X3-19/32X
3	00779366	1	HUB 1-3/4-20
4	00775335	1	DRIVE PLATE
5	00779365	1	DRIVE PLATE
6	00775337	1	THRUST PLATE
7	00775338	6	BOLT HEX M12 X P1.25 X 115M
8	00775339	6	COMPRESSION SPRING
9	00754566	6	LOCKWASHER, 12MM
10	00756164	6	NUT METRIC 12MM-P1.75 GR.8.8
11	00774208	1	LOCK ASY CC YOKE

 TAILWHEEL ASSEMBLY - DUAL RX84

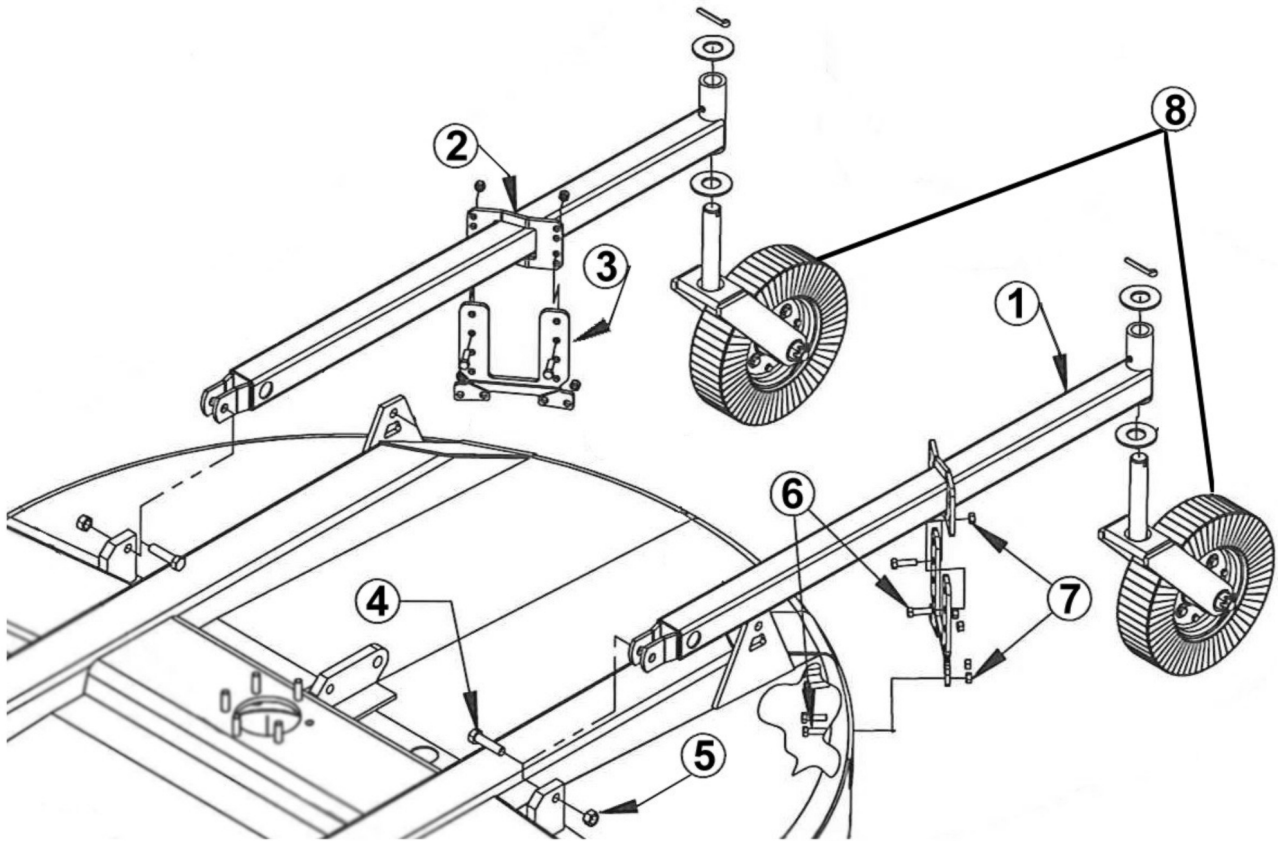


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781077	2	WDMT, T/W BEAM - 284/484
2	00781071	2	FLAT, POSITION BRACKET
3	00785473	2	MOUNT, DUAL TAILWHEEL BEAM
4	00007800	2	HEXB 3/4 NC 3 PL5
5	00037200	2	LOCKNUT 3/4-NC TLM PLC
6	00749130	8	HHCS 1/2-13 UNC 1-3/4 PL5
7	00001800	8	LOCKNUT TLM 1/2 NC PLB
8	00776220	1	WHEEL & FORK ASSEMBLY

 TAILWHEEL ASSEMBLY - RX60, RX72

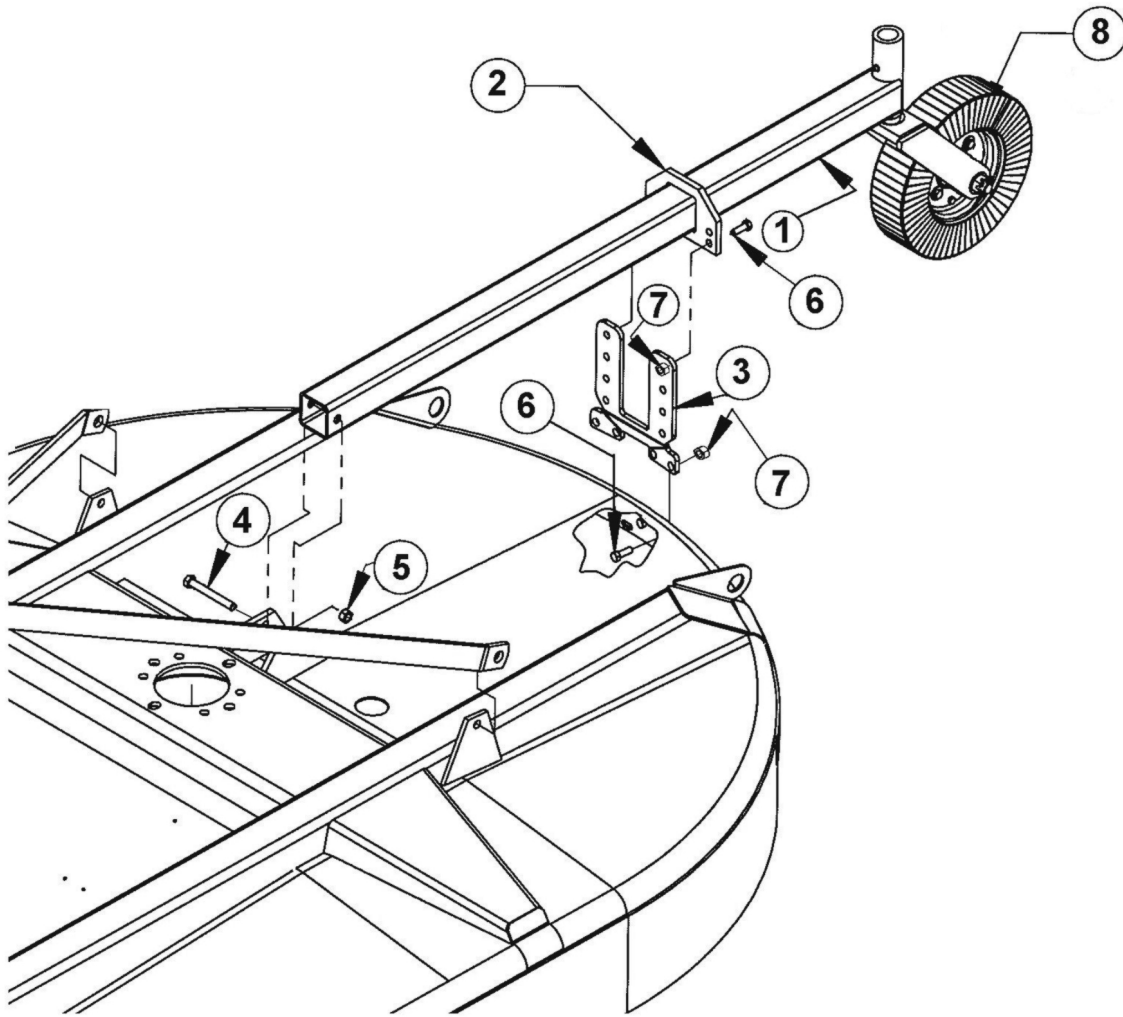



ITEM	PART NO.	QTY.	DESCRIPTION
1	00780876	1	WDMT, T/W BEAM - 272
	00781036	1	WDMT, T/W BEAM - 260
2	0585020300	1	BRACKET, POSITION
3	00785239	1	MOUNT, TAILWHEEL BEAM
4	00059000	1	HEXB 5/8 NC X 5 PL5
5	00695100	1	LOCKNUT TOPLOCK 5/8NC PLB
6	00748823	4	HHCS 1/2-13 UNC 1-1/2 PL5
7	00001800	4	LOCKNUT TLM 1/2 NC PLB
8	00776220	1	ASSY CASTER FORK & WHEEL

 TAILWHEEL ASSEMBLY - RX84

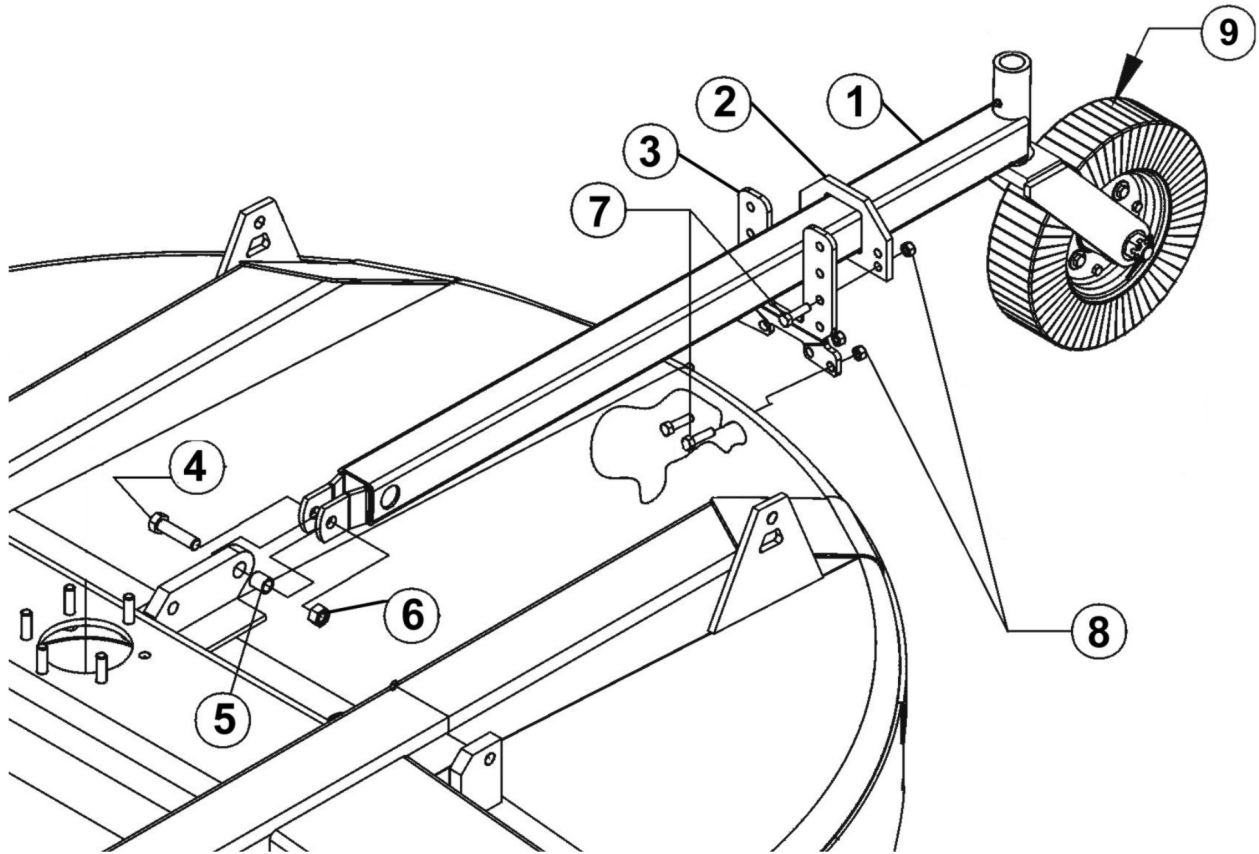


ITEM	PART NO.	QTY.	DESCRIPTION
1	00781077	1	WELDMENT, T/W BEAM
2	0585020300	1	BRACKET POSITION
3	00785473	1	MOUNT, T/W BEAM
4	00007800	1	HEXB 3/4 NC3 PL5
5	00781367	1	TUBE BUSHING
6	00037200	1	LOCKNUT 3/4 NC TLM PLC
7	00749130	4	HHCS 1/2-13UNC 1-3/4 PL5
8	00001800	4	TOPLOCKNUT, 1/2-13 NC PL
9	15B2400	4	FLATWASHER NAR 1-1/2 PL
10	00758899	1	PIN COTTER 3/8X2-1/2 PL EXTEND
11	00776220	1	ASY,CASTER FORK & WHEEL

  TAILWHEEL HUB ASSEMBLY

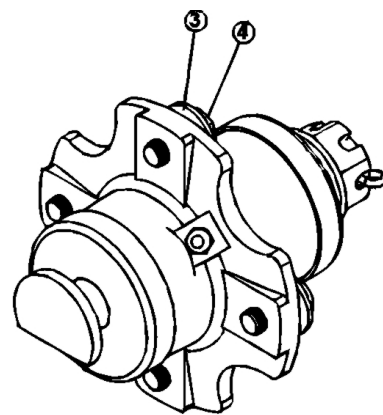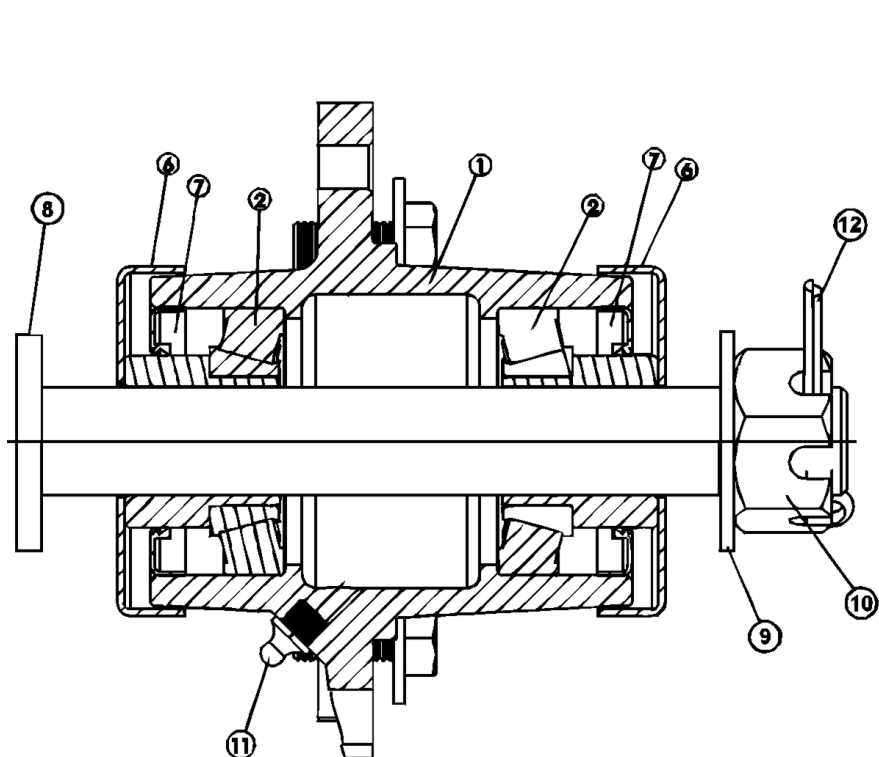

ITEM	PART NO.	QTY.	DESCRIPTION
	00780238	1	ASSY, TAILWHEEL HUB
1	00776214	1	HUB 4 BOLT
2	00776213	2	BEARING
3	00759635	4	FLATWASHER 1/2 HARDND NONPLATD
4	00762462	4	HEXB METRIC 12-P1.75- 25MM PL5
5	00772017	2	BUSHING SPINDLE STEP
6	00772018	2	DUST CAP
7	00776219	2	SEAL OIL 40 X 62 X 8
8	00776211	1	BOLT SPINDLE M24 X 2 X 186
9	00776217	2	WASHER FLAT 026 X 044 X 4 FLAT
10	00776212	1	NUT SPINDLE M24 X 2
11	00772082	1	NIPPLE, GREASE M8X1
12	00771620	1	PIN,COTTER 5/32X2-1/2 PL

 TONGUE ASSEMBLY - RX84

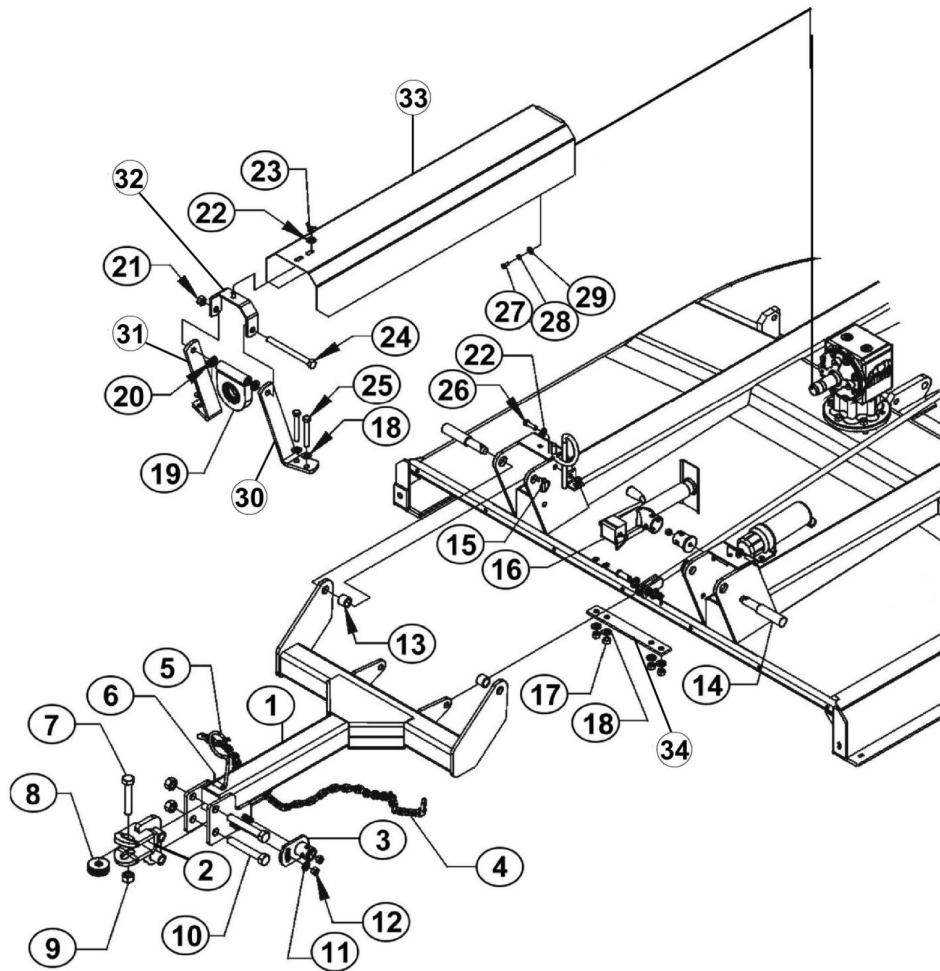

TONGUE ASSEMBLY - RX84

Continued...

ITEM	PART NO.	QTY.	DESCRIPTION
1	00777459	1	WDMT, TONGUE
2	00778053	1	WDMT, CLEVIS
3	00760941	1	WDMT, JACK TUBE MOUNT
4	00764515	1	CHAIN, SAFETY TOW-6000# CAP.
5	1431565	1	SHAFT, PTO IID TRANSPORT SUPPRT
6	40010000	1	PIN, COTTER 1/8 X1
7	00755076	1	HHCS 1 NC 5-1/2 PL8
8	00759275	3	WASHER, HITCH CLEVIS
9	02030300	3	NUT TOPLOCK 1 NC PLB
10	00754107	2	BOLT 1 - 8UNC X 6-1/2 PL8
11	00756077	2	WASHER, 5/8 HARDENED
12	00695100	2	LOCKNUT TOPLOCK 5/8 NC PLB
13	00761890	2	BUSHING 1.5 OD X 1.14 IDX 1-3/16 LG
14	00758146	2	PIN, TONGUE PIVOT
15	2196	2	CLIP (LYNCH PIN), 13/32 DIA.
16	00772391	1	PARKING JACK SIDEWIND
17	00695100	4	NUT, 5/8 NC TOPLOCK
18	00001400	8	FLATWASHER 5/8 PL STD
19	00775006A	1	BEARING ASSEMBLY
20	00002701	2	FLATWASHER, 3/4, TYPE AW, ZP
21	00037200	1	LOCKNUT 3/4-NC TLM PLC
22	00002700	1	FLATWASHER 1/2
23	5F8130	1	WINGNUT 1/2 NC
24	00781172	1	HHCS 3/4 NC 8-1/2 PL5
25	02845800	4	HEXB, 5/8 NC X 4-1/2 GRD5 ZP
26	00749130	2	HHCS 1/2 - 13 UNC 1-3/4 PL5
27	00002000	1	HEX CAP 3/8 - 16 X 3/4 GR.5 ZP
28	00012101	1	LOCKWASHER 3/8 PL
29	00011100	1	FLATWASHER 3/8 PL STD
30	00781166	1	FLAT, LH BEARING PIVOT
31	00781167	1	FLAT, RH BEARING PIVOT
32	00781174	1	WELDMENT, SHIELD BRACKET 4 BOLT
	00781168	1	WELDMENT, SHIELD BRACET 3 BOLT
33	00786671	1	WLDMT, J/S SHIELD
34	00781175	1	FLAT, REINFORCING STRAP



TO THE OWNER/OPERATOR/DEALER

To keep your implement running efficiently and safely, read your manuals thoroughly and follow these directions and the Safety Messages in this Manual. The Table of Contents clearly identifies each section where you can easily find the information you need.

The OCCUPATIONAL SAFETY AND HEALTH ACT (1928.51 Subpart C) makes these minimum safety requirements of tractor operators:

REQUIRED OF THE OWNER

1. Provide a Roll-Over-Protective Structure that meets the requirements of this standard.
2. Provide seat belts that meet the requirements of this paragraph of this standard and SAE J4C.
3. Ensure that each employee uses such seat belt while the tractor is moving.
4. Ensure that each employee tightens the seat belt sufficiently to confine the employee to the protected area provided by the ROPS.

REQUIRED OF THE OPERATOR

1. Securely fasten seat belt if the tractor has a ROPS.
2. Where possible, avoid operating the tractor near ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going, especially at row ends, on roads, and around trees.
6. Do not permit others to ride.
7. Operate the tractor smoothly, no jerky turns, starts, or stops.
8. Hitch only to the draw bar and hitch points recommended by the tractor manufacturer.
9. When the tractor is stopped, set brakes securely and use park lock, if available.



Keep children away from danger all day, every day...



Equip tractors with rollover protection (ROPS) and keep all machinery guards in place...



Please work, drive, play and live each day with care and concern for your safety and that of your family and fellow citizens.

ALAMO INDUSTRIAL

Limited Warranty

1. Limited Warranties

- 1.01. Alamo industrial warrants for one year from the purchase date to the original non-commercial, governmental, or municipal purchaser ("purchaser") and warrants for six months to the original commercial or industrial purchaser ("purchaser") that the goods purchased are free from defects in material or workmanship.
- 1.02. Manufacturer will replace for the purchaser any part or parts found, upon examination at one of its factories, to be defective under normal use and service due to defects in material or workmanship.
- 1.03. This limited warranty does not apply to any part of the goods which has been subjected to improper or abnormal use, negligence, alteration, modification, or accident, damaged due to lack of maintenance or use of wrong fuel, oil, or lubricants, or which has served its normal life. This limited warranty does not apply to any part of any internal combustion engine, or expendable items such as blades, shields, guards, or pneumatic tires except as specifically found in your operator's manual.
- 1.04. Except as provided herein, no employee, agent, dealer, or other person is authorized to give any warranties of any nature on behalf of manufacturer.

2. Remedies And Procedures

- 2.01. This limited warranty is not effective unless the purchaser returns the registration and warranty form to manufacturer within 30 days of purchase.
- 2.02. Purchaser claims must be made in writing to the authorized dealer ("dealer") from whom purchaser purchased the goods or an approved authorized dealer ("dealer") within 30 days after purchaser learns of the facts on which the claim is based.
- 2.03. Purchaser is responsible for returning the goods in question to the dealer.
- 2.04. If after examining the goods and/or parts in question, manufacturer finds them to be defective under normal use and service due to defects in material or workmanship, manufacturer will:
 - (A) repair or replace the defective goods or part(s) or
 - (B) reimburse purchaser for the cost of the part(s) and reasonable labor charges (as determined by manufacturer) if purchaser paid for the repair and/or replacement prior to the final determination of applicability of the warranty by manufacturer. The choice of remedy shall belong to manufacturer.
- 2.05. Purchaser is responsible for any labor charges exceeding a reasonable amount as determined by manufacturer and for returning the goods to the dealer, whether or not the claim is approved. Purchaser is responsible for the transportation cost for the goods or part(s) from the dealer to the designated factory.

3. Limitation Of Liability

- 3.01. Manufacturer disclaims any express (except as set forth herein) and implied warranties with respect to the goods including, but not limited to, merchantability and fitness for a particular purpose.
- 3.02. Manufacturer makes no warranty as to the design, capability, capacity, or suitability for use of the goods.
- 3.03. Except as provided herein, manufacturer shall have no liability or responsibility to purchaser or any other person or entity with respect to any liability, loss, or damage caused or alleged to be caused directly or indirectly by the goods including, but not limited to, any indirect, special, consequential, or incidental damages resulting from the use or operation of the goods or any breach of this warranty. Notwithstanding the above limitations and warranties, manufacturer's liability hereunder for damages incurred by purchaser or others shall not exceed the price of the goods.
- 3.04. No action arising out of any claimed breach of this warranty or transactions under this warranty may be brought more than two (2) years after the cause of action has occurred.

4. Miscellaneous

- 4.01. Proper venue for any lawsuits arising from or related to this limited warranty shall be only in Guadalupe county, Texas.
- 4.02. Manufacturer may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
- 4.03. If any provision of this limited warranty shall violate any applicable law and is held to be unenforceable, then the invalidity of such provision shall not invalidate any other provisions herein.
- 4.04. Applicable law may provide rights and benefits to purchaser in addition to those provided herein.

Keep for your records

Attention: Purchaser should fill in the blanks below for his reference when buying repair parts and/or for proper machine identification when applying for warranty.

Alamo Industrial Implement Model _____ Serial Number _____
Date Purchased _____ Dealer _____

Attention:
Read your operator's manual



ALAMO INDUSTRIAL
1502 E. Walnut
Seguin, Texas 78155
830-379-1480

